



2.3 Open right side panel

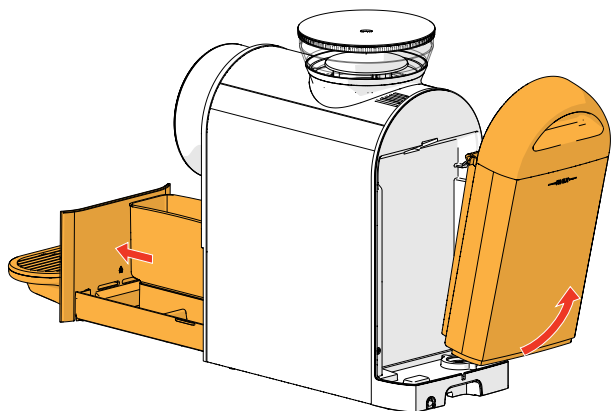


Step 1

- *Unplug the machine to turn off the power before opening it.*
- remove the drip tray and the water tank

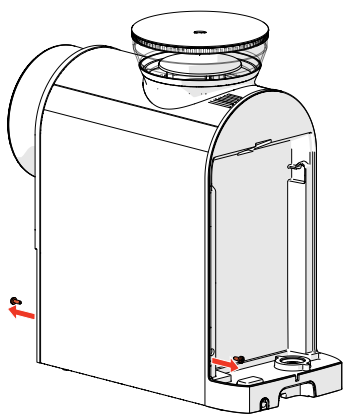

Step 2


- remove 2 screws

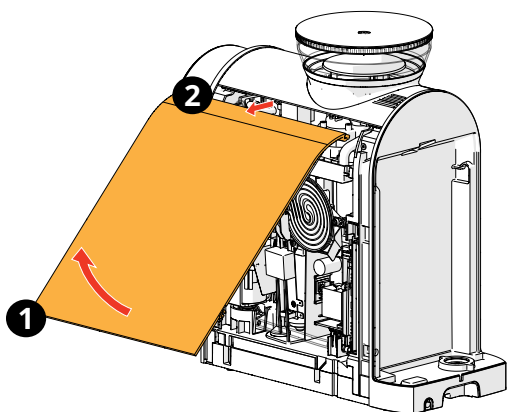

Step 3


- remove the side panel

2.4 Remove back panel

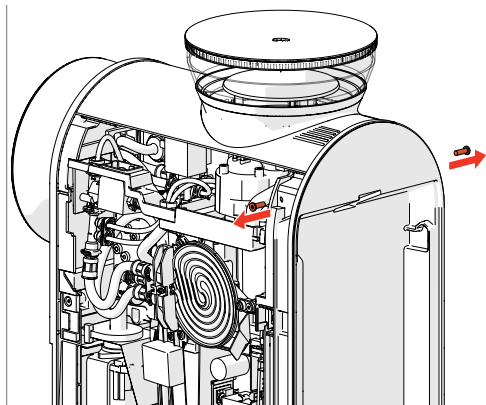

Step 1


- remove both side panels
- remove 2 screws

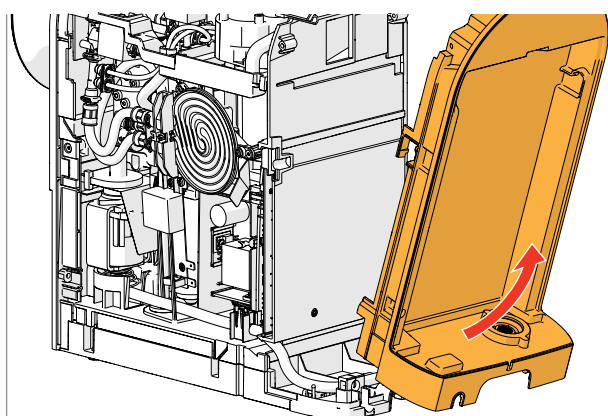

Step 2


- lift the back panel
- disconnect the hose to remove the back panel

2.5 Remove fan

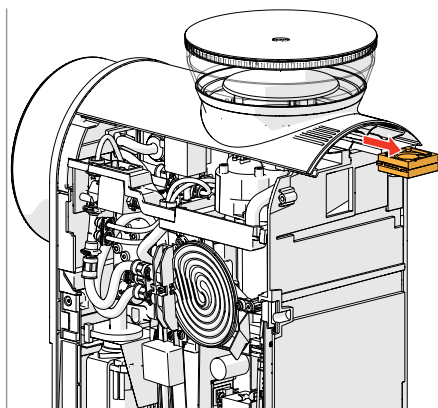

Step 1

- disconnect the wiring
- take out the fan

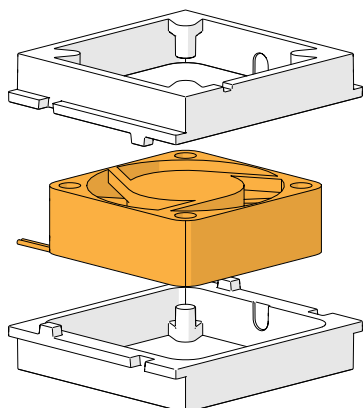


Step 2

- remove the fan suspension

► Blade rotation:


- » clockwise, as seen from the above (label side)
- » the air must be blown out of the Sprso

2.6 Remove grinder

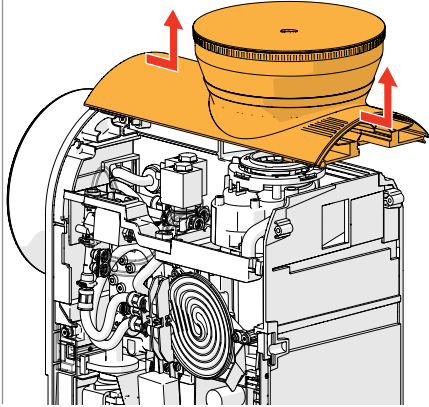


Step 1

- remove both side panels and the back panel
- remove the top of the machine

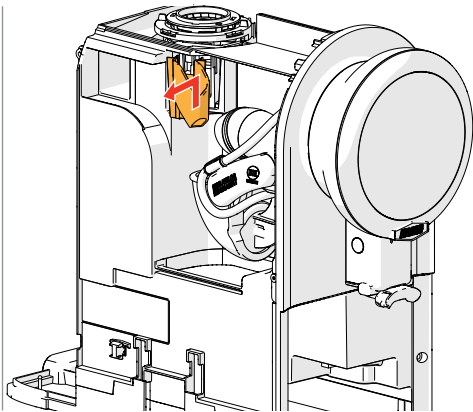


Step 2

- remove the outlet grinder

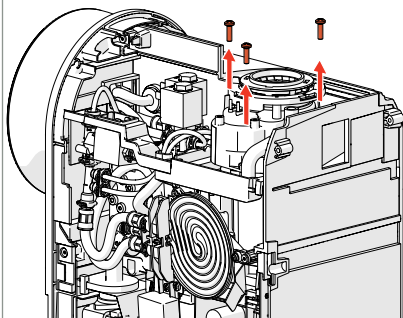

Step 3


- remove 3 screws

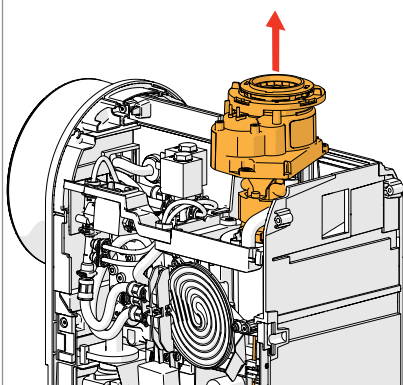

Step 4


- detach the connector of the grinder from the I/O board
 - *The grinder can only be removed by cutting the wire, once this is done the grinder can no longer be used.*
- cut the wire nearby the connector
- remove the grinder

2.7 Remove the water counter/safety switches

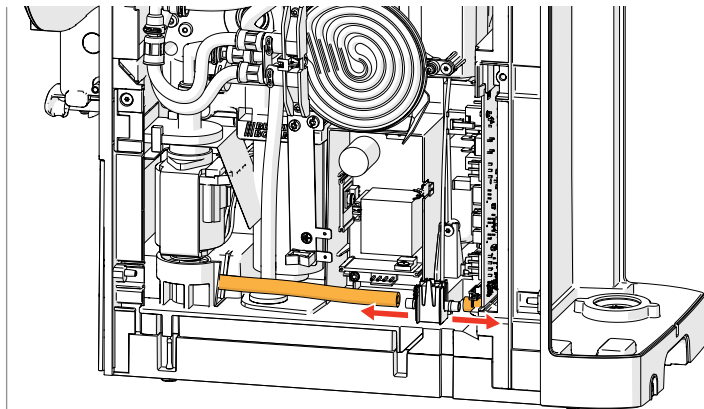


Step 1

- disconnect the hoses from the water counter

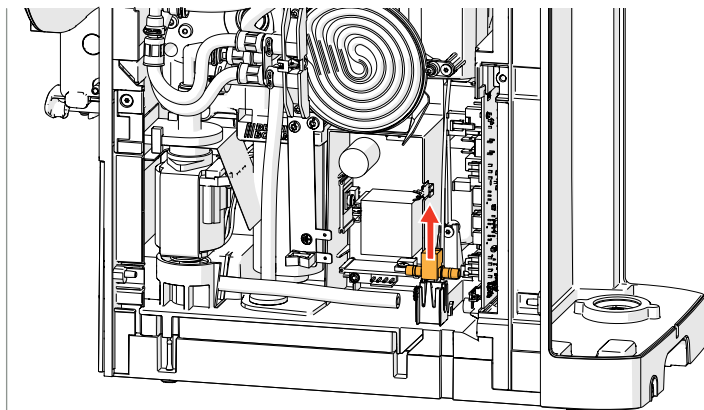


Step 2

- disconnect the wiring
- remove the water counter

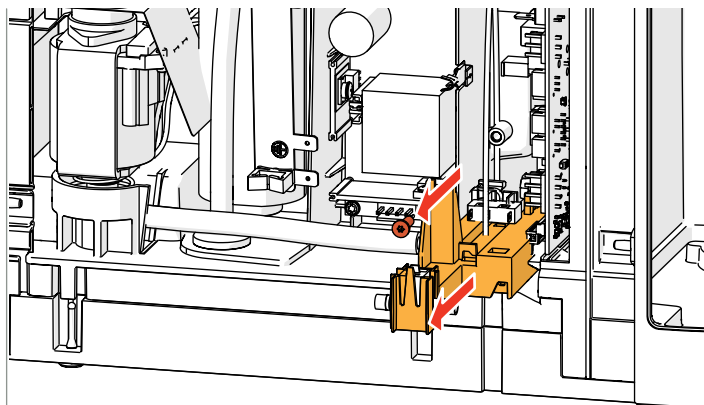

Step 3


- disconnect the wiring of the water counter and the safety switches
- remove the screw from the bracket and pull out the bracket

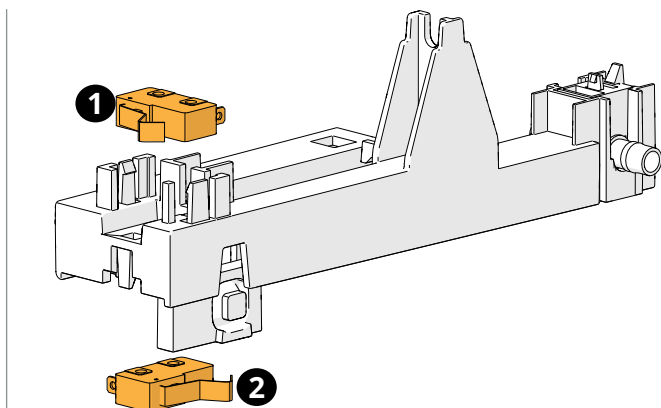

Step 4


- remove the defective switches
 1. side panel safety switch
 2. drip tray safety switch

2.8 Remove I/O board

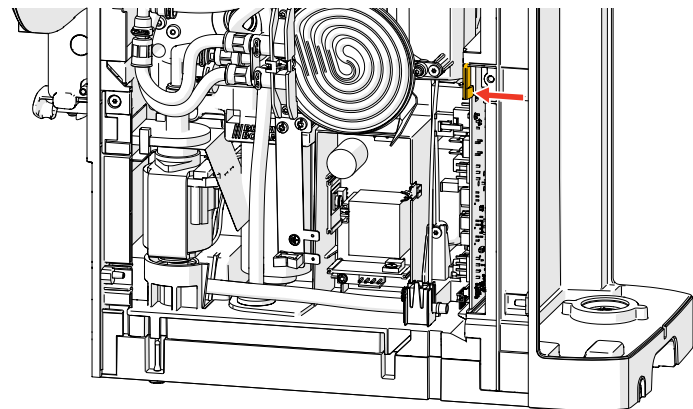


Step 1

- push the click-finger and pull out the I/O board slightly

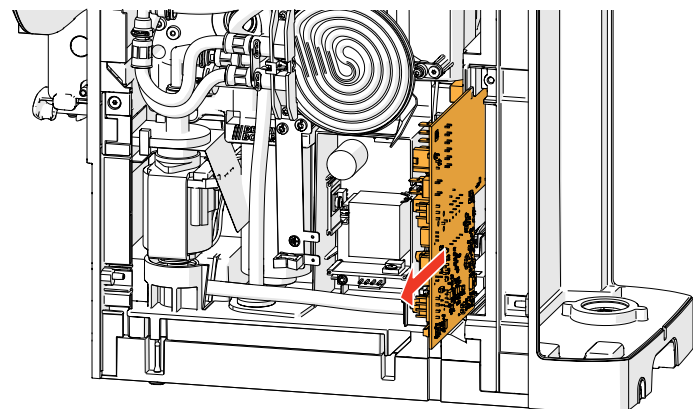


Step 2

- disconnect the wiring
- remove the I/O board

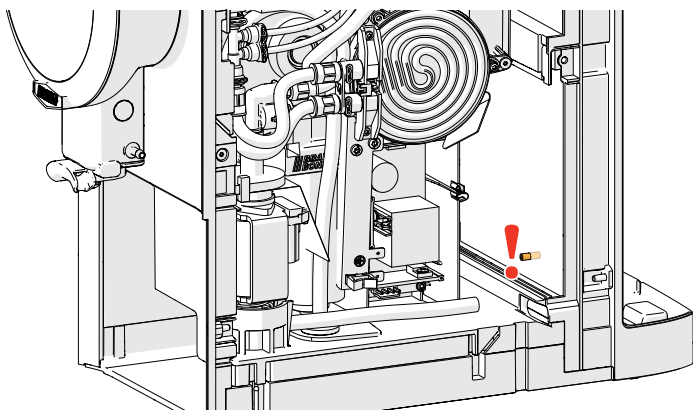

► *Position of the ferrite rod.*

2.9 Remove power board

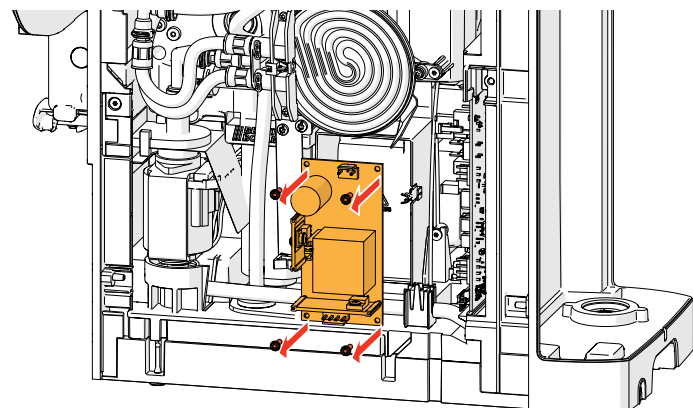

- remove the screws
- disconnect the wiring
- remove the power board