



3.5 Remove the canister motor

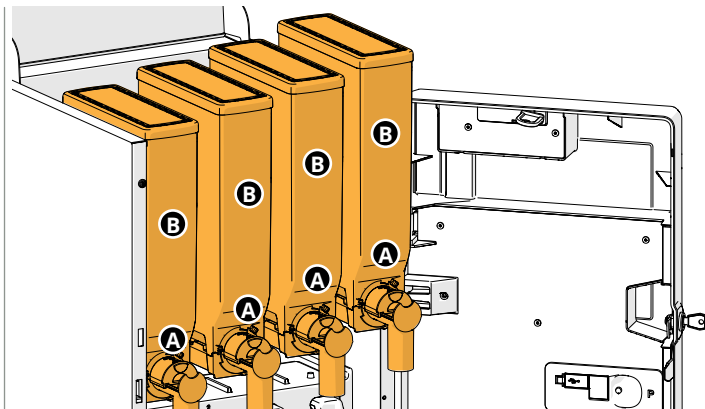


Step 1

- open the lid
- close the “yellow” sliders **A** of the canister outlets
- remove the canisters **B**

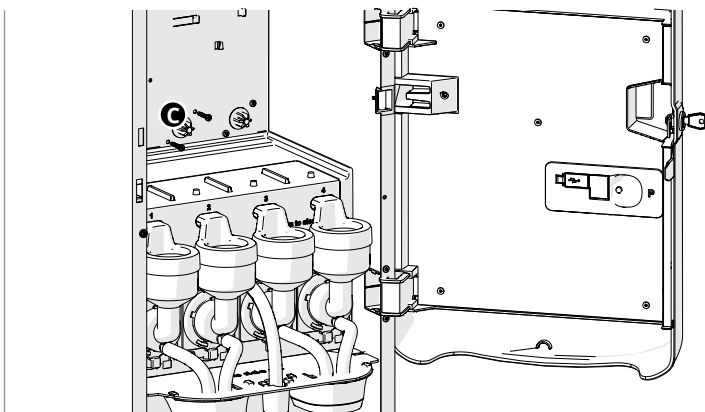

Step 2


- remove the 2 screws **C** of the canister motor

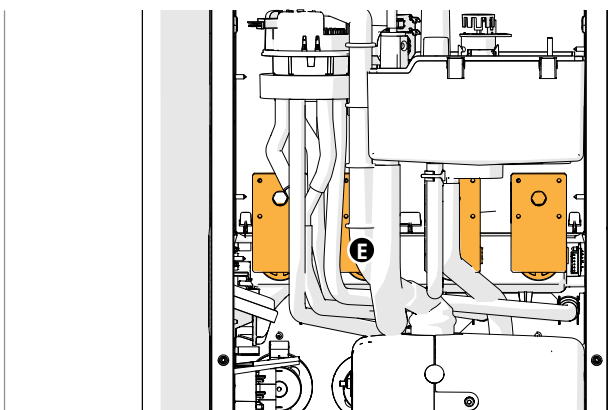

Step 3

- remove the back panel as in [Step 1](#) of [section 3.3](#)
 - *If necessary, loosen the hoses to make room.*
- move the complete canister drive/motor **E** upward to unlock it
- disconnect the connector

3.6 Remove the I/O board

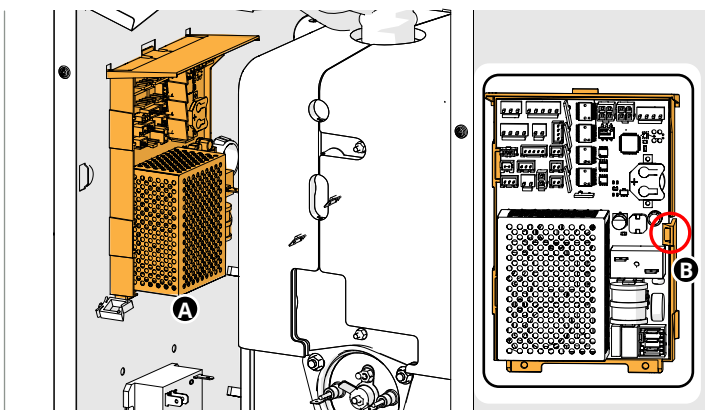

Step 1

- remove the back panel as in [Step 1](#) of [section 3.3](#)
- disconnect the wiring
- remove the I/O board **A** using clip **B**