

ID	Service parts	S-RS	Description
A-01	6.236.546.000	S	Housing lid (assy)
A-02	6.236.547.001	DT	Top part housing
A-03	6.236.591.001	DT	Corner piece FL/RB
A-04	6.236.592.001	DT	Corner piece LB/FR
A-05	6.401.004.001	S	Insert foot (1 pc)
A-06	6.236.563.001	S	Tap housing
A-07	6.236.830.000	S	Protection cover
A-08	6.015.001.213	RS	Rubber cup
A-09	6.015.001.214	S	Tap leverrod
A-10	6.015.001.215	RS	Compression spring for tap
A-11	6.236.564.001	S	Cap faucet
A-12	6.236.567.001	S	Lever faucet handdrain
A-13	6.000.236.114	S	Tap (manual) assy
A-14	6.236.593.001	DT	Spacer
A-15	6.331.097.001	DT	Spring washer
A-16	6.331.023.001	DT	Nut M16X1
A-17	6.236.559.000	S	Program keys
A-18	6.236.548.001	S	Bottom part HWA 14(D) / 21

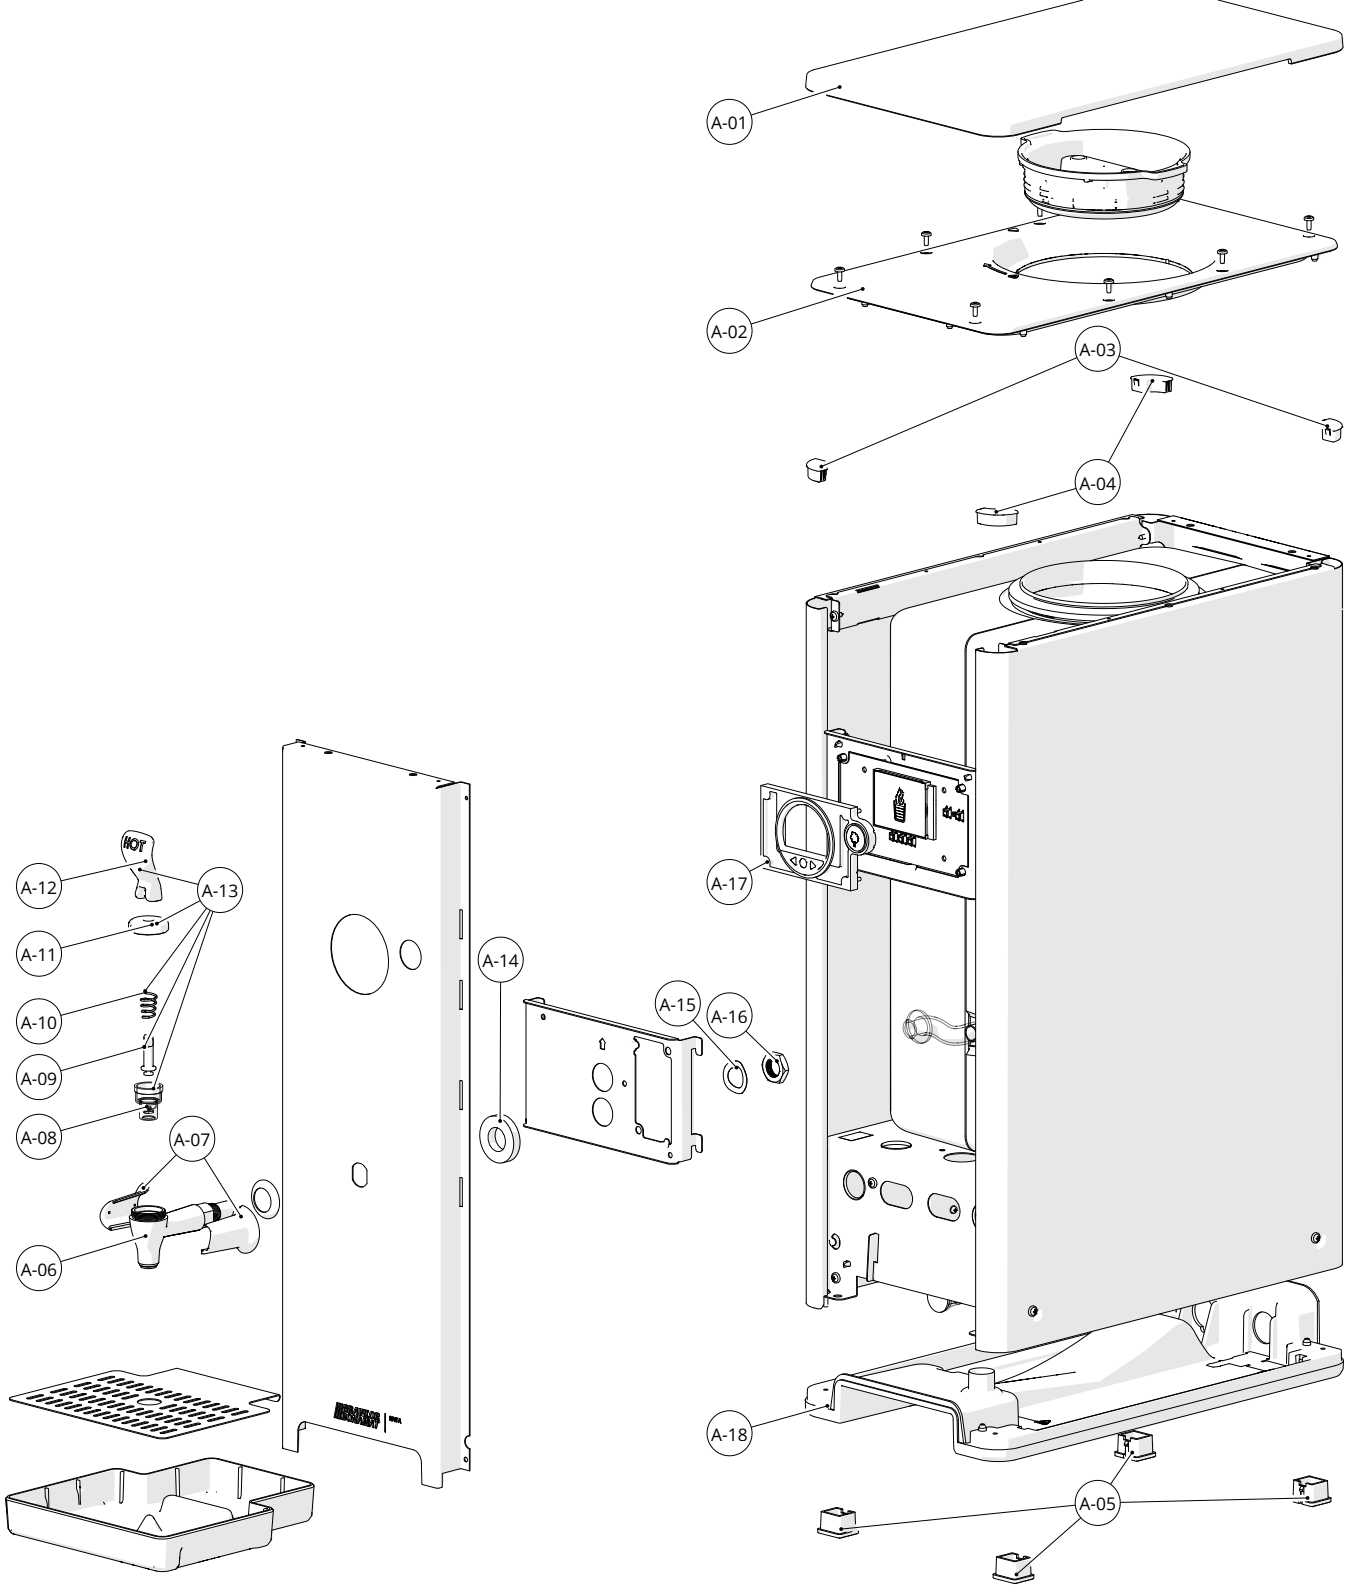

BRAVILOR BONAMAT | HWA


ID	Service parts	S-RS	Description
B-01a	6.003.012.062	S	Connection cord (STD)
B-01b	6.003.012.118	S	Connection cord (GB)
B-02	6.004.001.089	RS	Switch
B-03	6.006.001.063	S	Strain relief
B-04	6.002.019.160	DT	Connection clamp
B-05	6.005.012.008	S	Fuse holder 2 parts
B-06	6.005.011.016	S	Fuse 4A (10 pcs)
B-07	6.236.668.000	S	Suppression coil
B-08	6.002.001.037	S	Connection clamp
B-09	6.004.002.093	RS	Relay
B-10	6.004.011.112	RS	Switching power supply 24V-75
B-11	6.236.558.003	RS	Mainboard + Firmware

230V

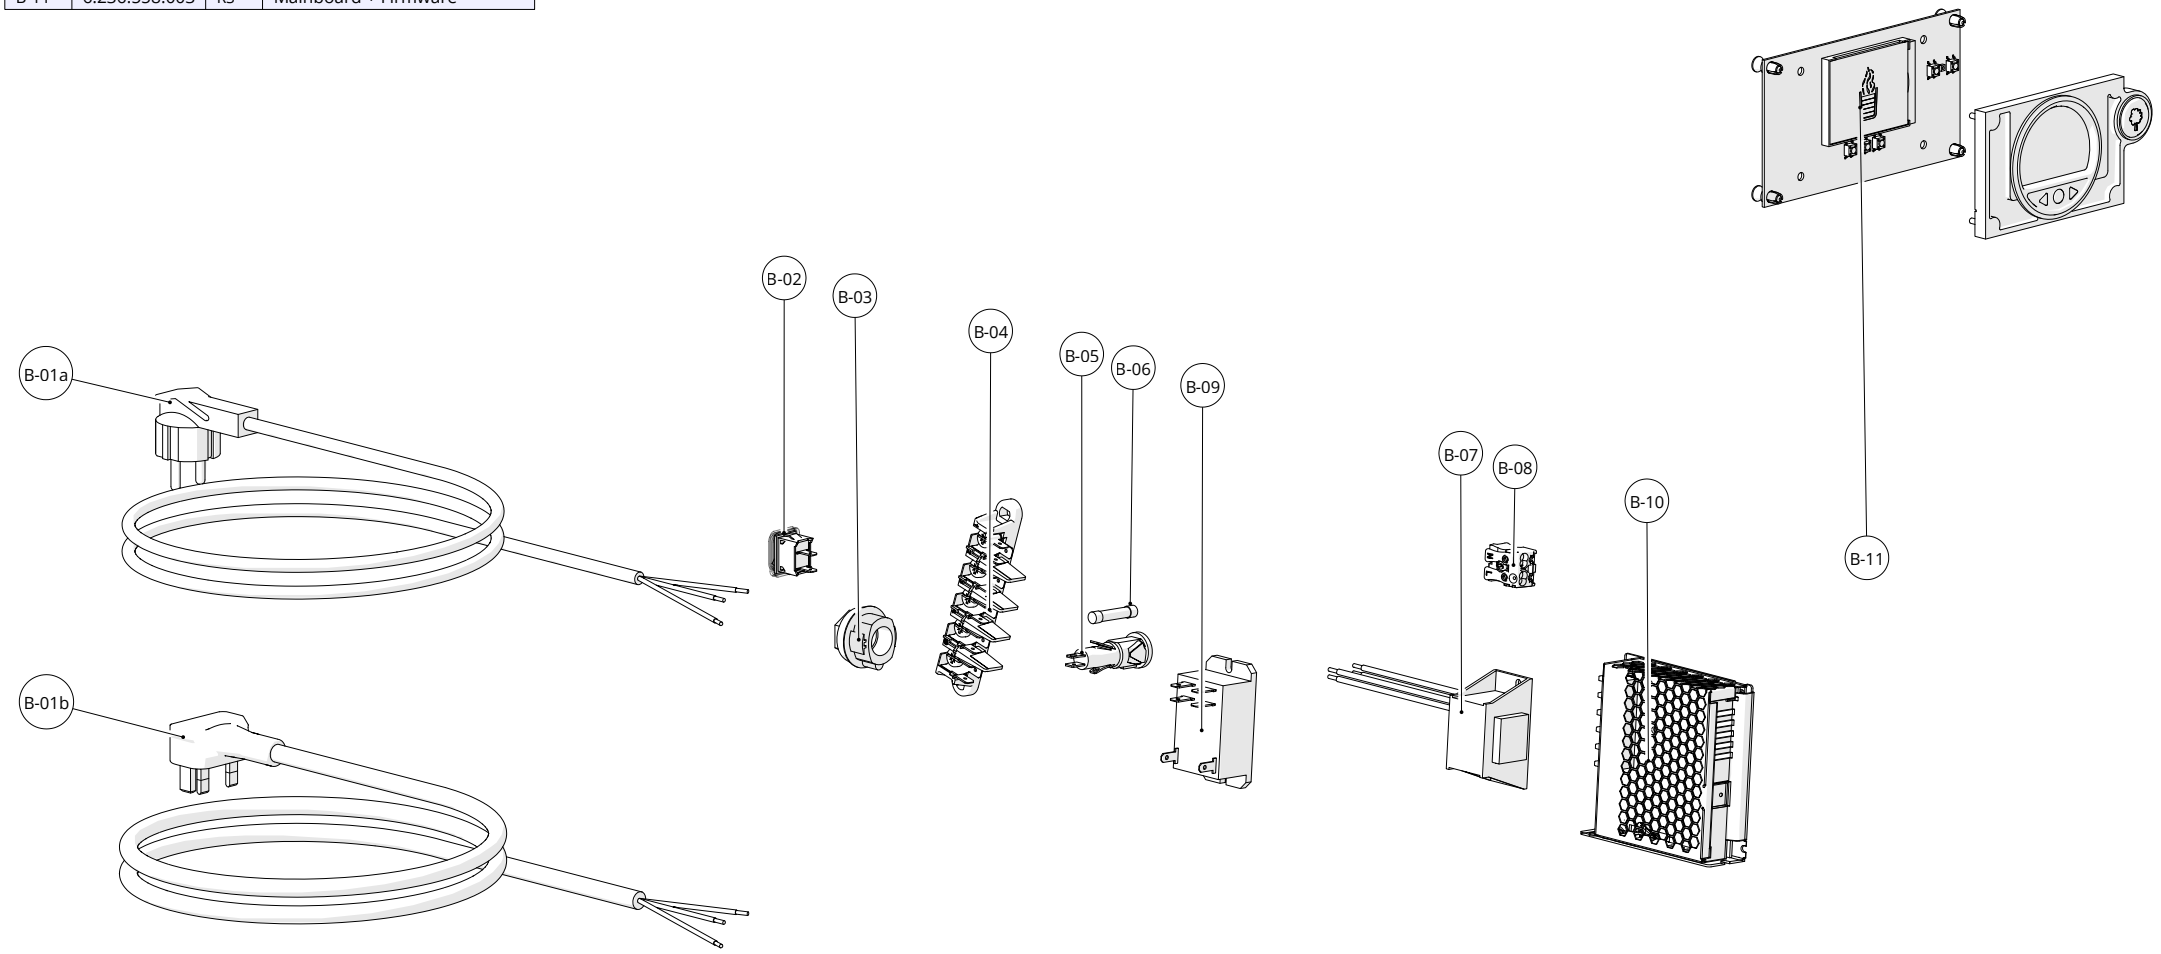


400V3N

ID	Service parts	S-RS	Description
B-02	6.004.001.089	RS	Switch
B-03	6.006.001.063	S	Strain relief
B-04	6.002.019.160	DT	Connection clamp
B-05	6.005.012.008	S	Fuse holder 2 parts
B-06	6.005.011.016	S	Fuse 4A (10 pcs)
B-07	6.236.668.000	S	Suppression coil
B-08	6.002.001.037	S	Connection clamp
B-09	6.004.002.093	RS	Relay
B-10	6.004.011.112	RS	Switching power supply 24V-75
B-11	6.236.558.003	RS	Mainboard + Firmware

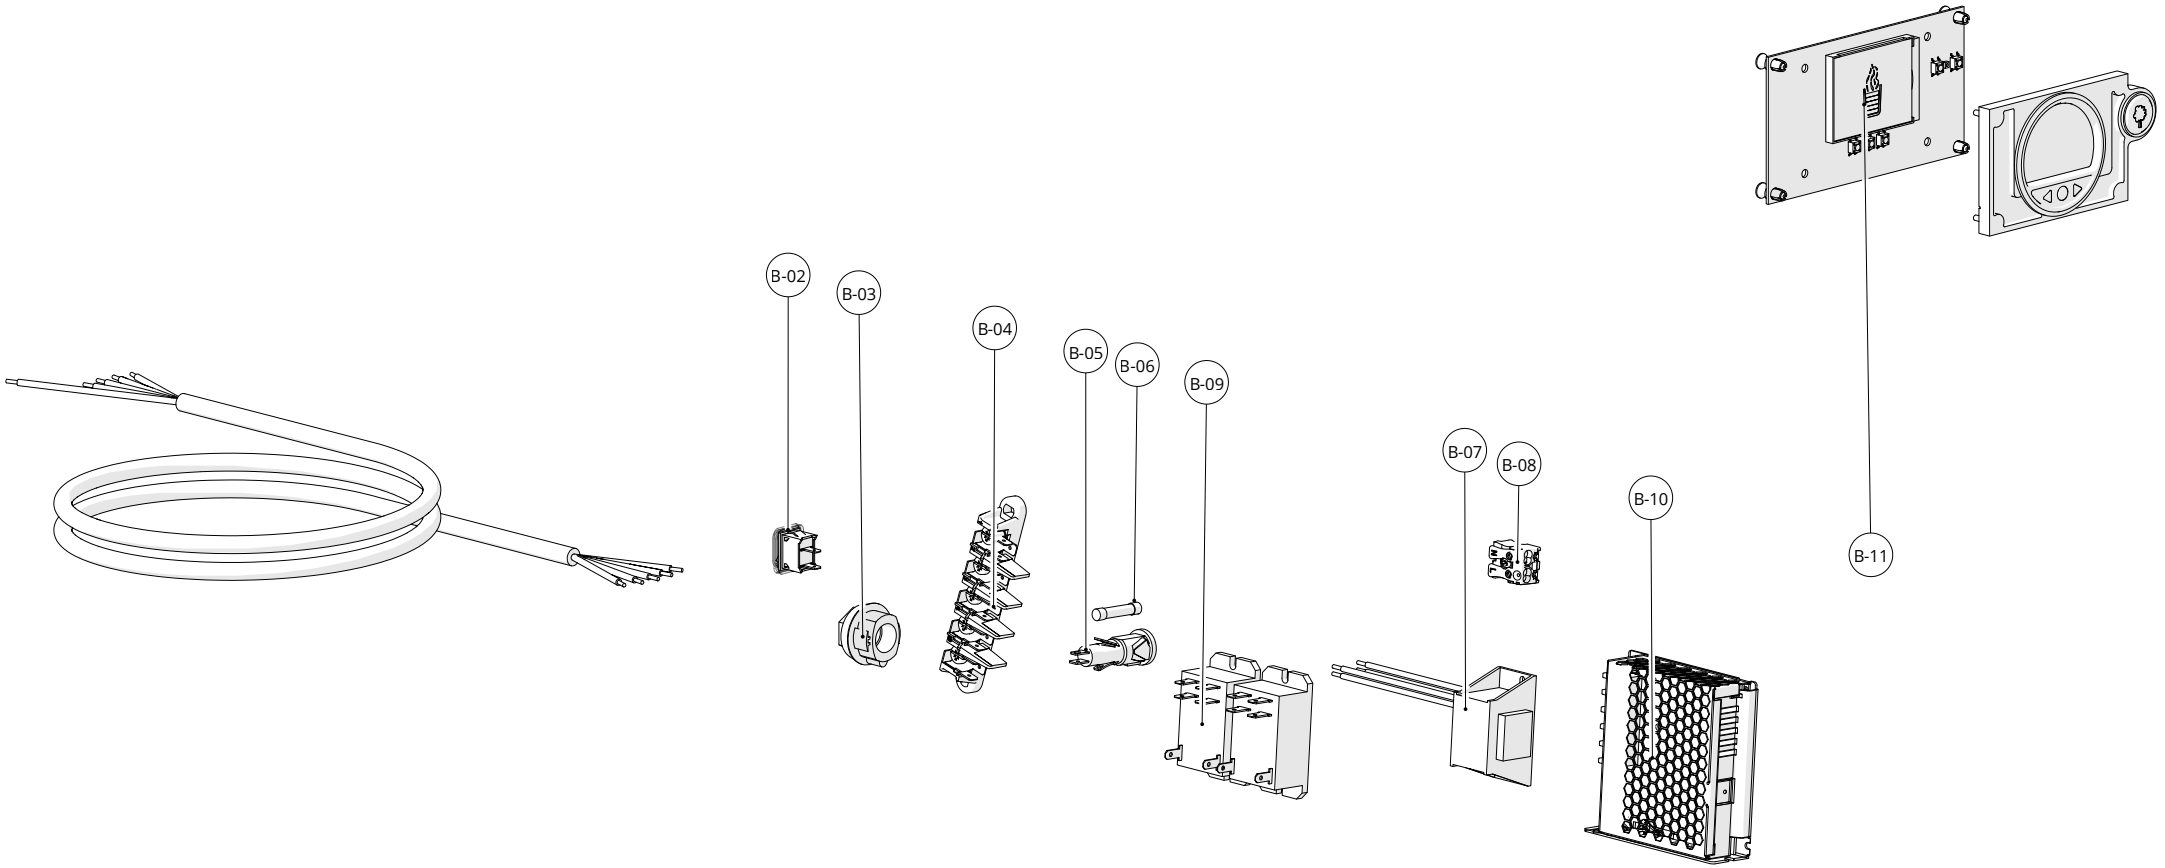


ID	Service parts	S-RS	Description
C-01	6.000.205.111	S	Connection hose
C-02	6.202.848.001	S	Nut for magnetic valve
C-03	6.016.001.096	RS	Magnetic valve 2 l/min. 24V DC
C-04	6.001.079.003	S	Tube clamp 15.6 mm
C-05	6.013.005.018	S	Non-return valve
C-06	6.019.033.014	S	Silicone tube 9.5 x 3.0
C-07	6.001.079.006	S	Tube clamp 19 mm
C-08	6.019.033.013	S	Silicone tube 9.5 x 3.0
C-09	6.006.002.082	DT	Inlet Bush 18x22
C-10	6.311.073.001	S	Overflow tube support
C-11	6.233.066.001	S	Drain hose
C-12	6.329.539.001	S	Tightening plug 10,1x18mm grey
C-13	6.236.585.001	S	Hose faucet hand drain

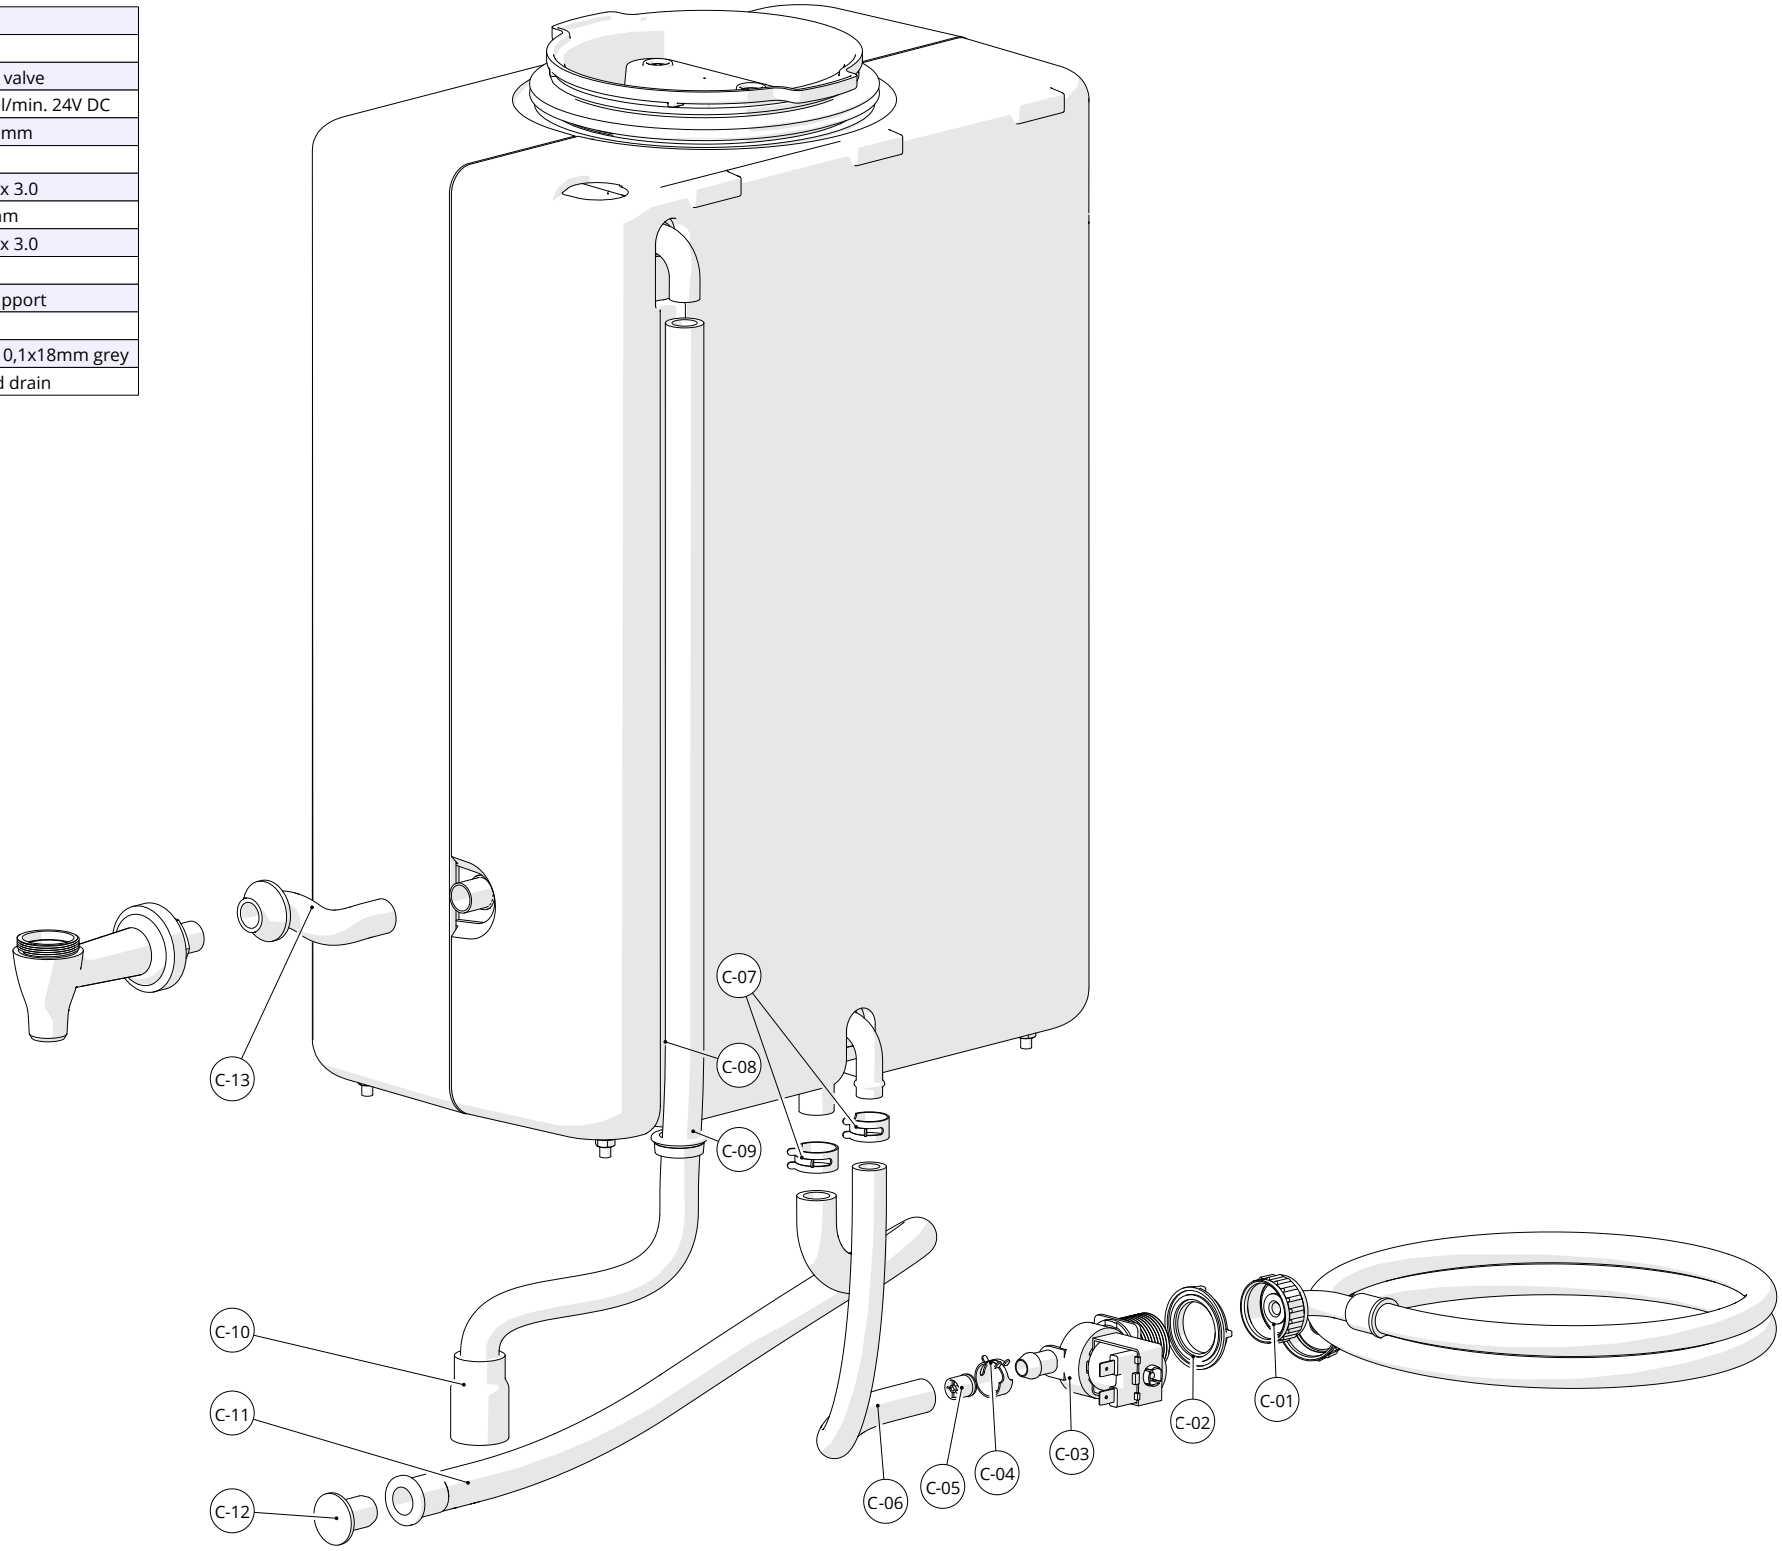

BRAVILOR BONAMAT | HWA

ID	Service parts	S-RS	Description
D-01	6.236.580.001	DT	Insulation part 2
D-02	6.236.776.000	S	Screw cap boiler
D-03	6.236.554.001	RS	Sealing ring boiler
D-04	6.236.549.000	RS	Element 240V 2500W + 500W
D-05	6.016.008.093	RS	High temp safety device 298°C
D-06	6.011.001.205	RS	O-ring 7.65x1.78
D-07	6.236.848.001	S	Centre ring element boiler
D-08	6.236.551.001	RS	Holder level sensor
D-09	6.236.552.001	RS	Level sensor
D-10	6.236.587.000	RS	Tempaturesensor complete
D-11	6.001.009.006	DT	Washer
D-12	6.011.031.007	RS	Packingring 10x14x1 Clipperlon
D-13	6.236.581.001	DT	Insulation part 1

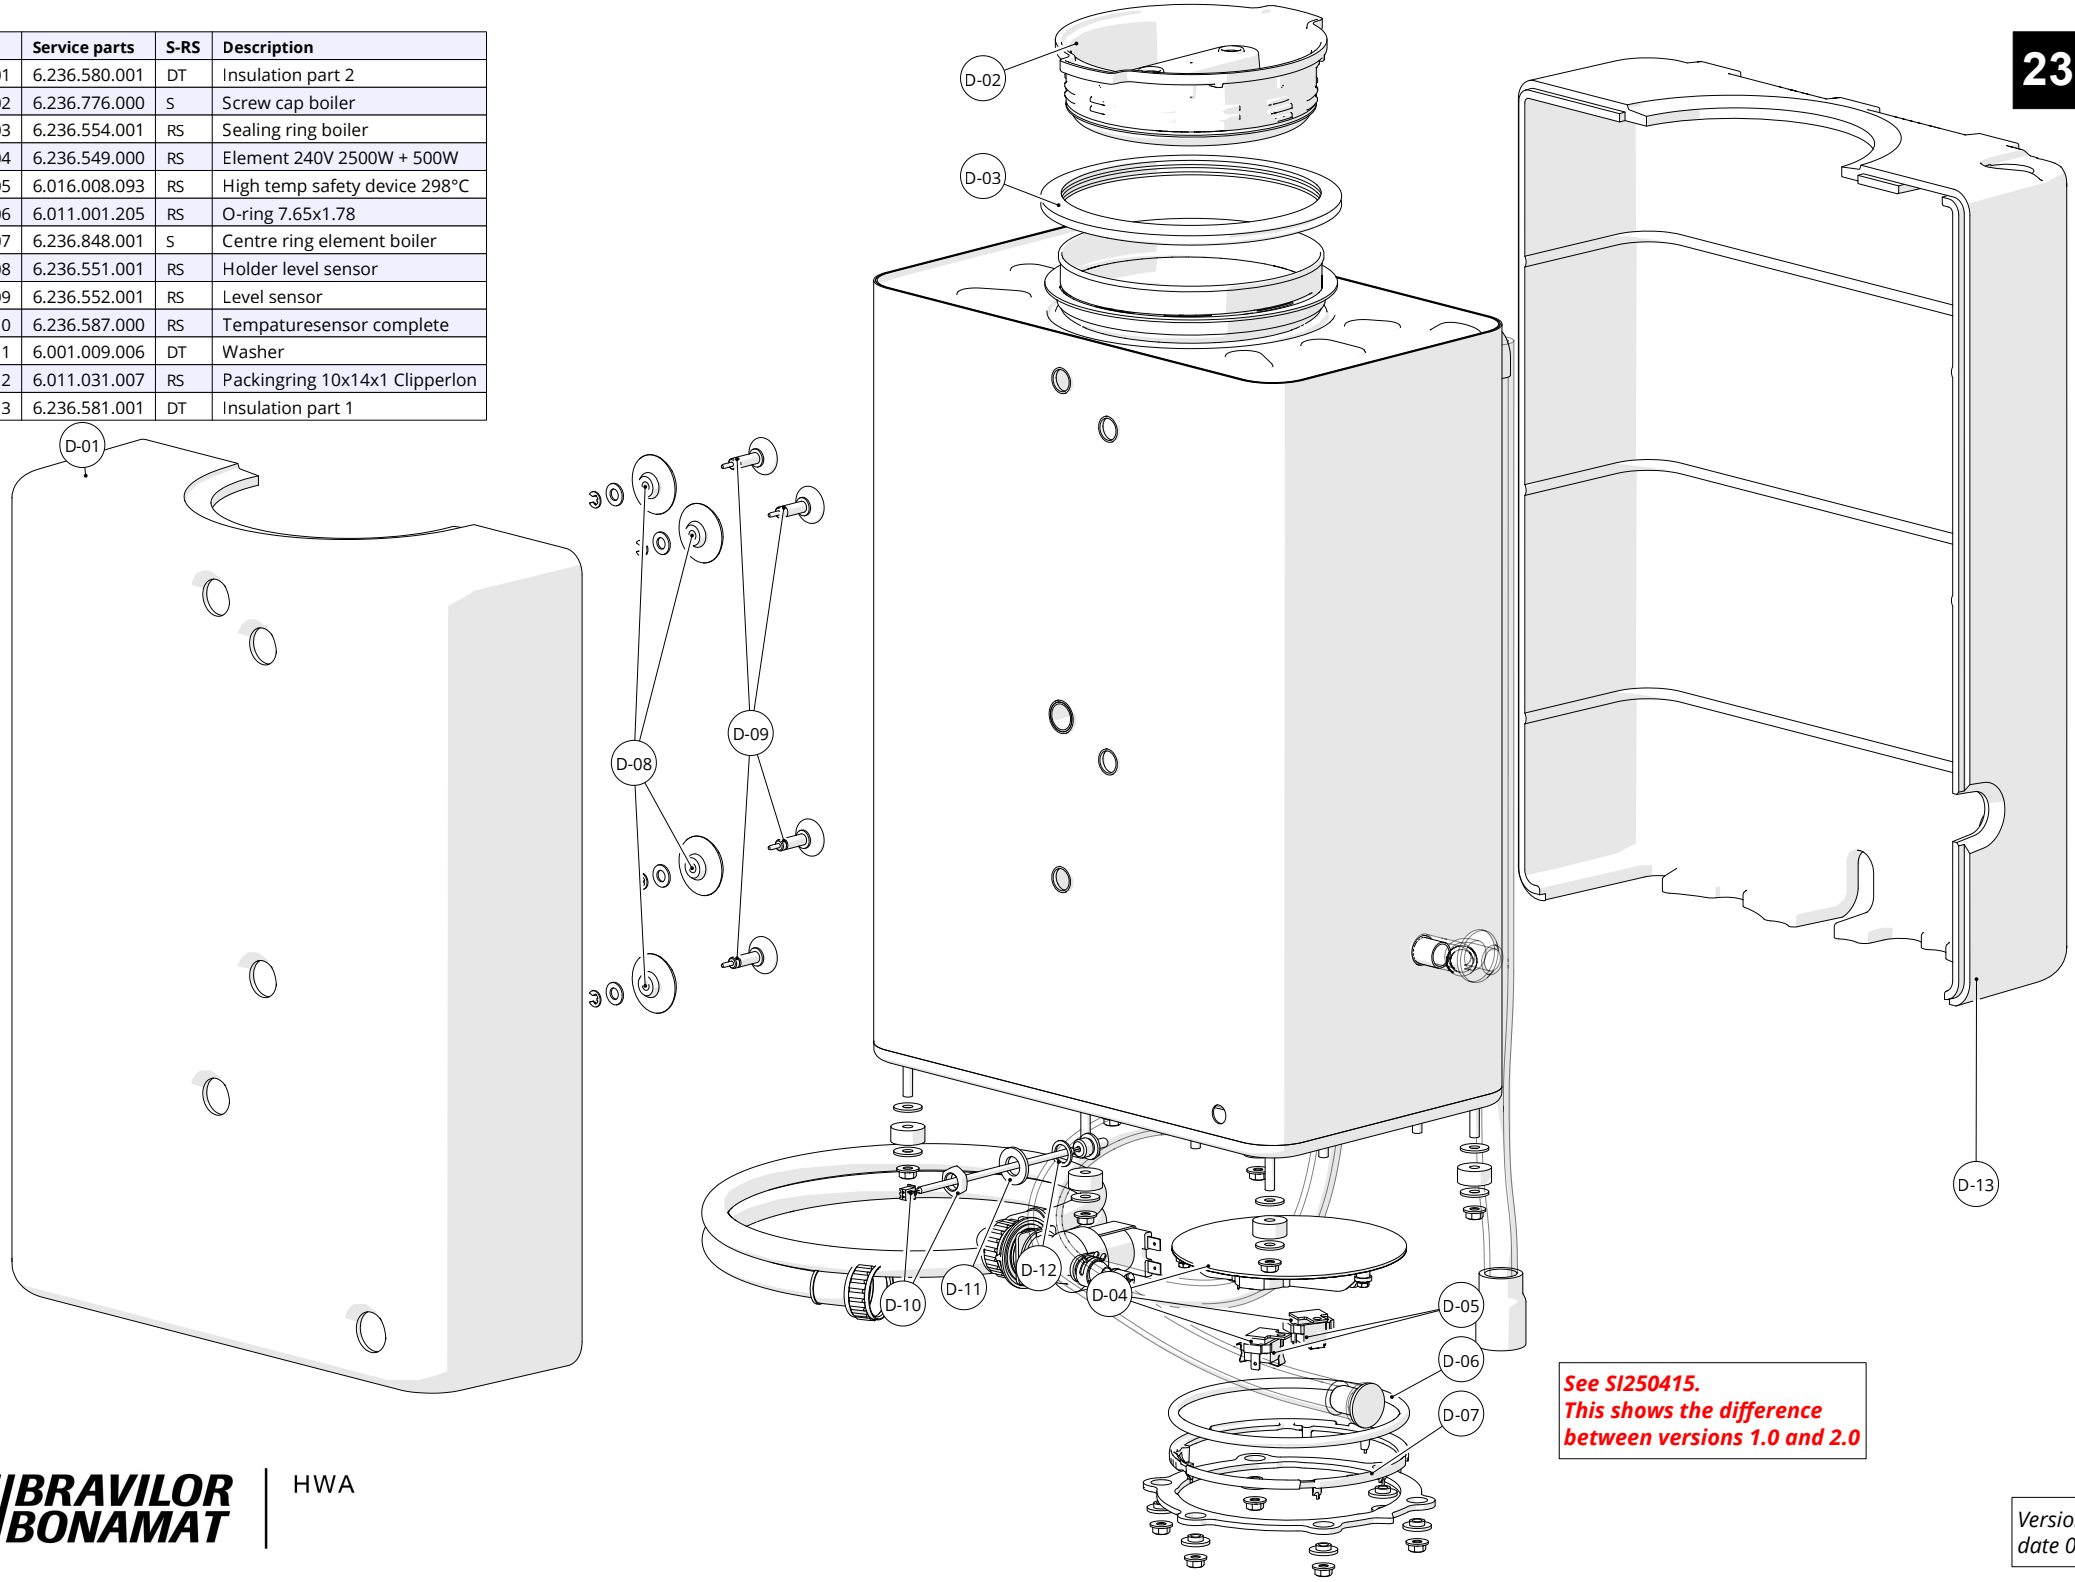

230V


See SI250415.
This shows the difference between versions 1.0 and 2.0

BRAVILOR BONAMAT | HWA

Version 2.0
date 01-03-25

400V3N

ID	Service parts	S-RS	Description
D-01	6.236.580.001	DT	Insulation part 2
D-02	6.236.776.000	S	Screw cap boiler
D-03	6.236.554.001	RS	Sealing ring boiler
D-04	6.236.549.000	RS	Element 240V 2500W + 500W
D-05	6.016.008.093	RS	High temp safety device 298°C
D-06	6.011.001.205	S	O-ring 7.65x1.78
D-07	6.236.848.001	S	Centre ring element boiler
D-08	6.236.551.001	RS	Holder level sensor
D-09	6.236.552.001	RS	Level sensor
D-10	6.236.587.000	RS	Tempaturesensor complete
D-11	6.001.009.006	DT	Washer
D-12	6.011.031.007	RS	Packingring 10x14x1 Clipperlon
D-13	6.236.581.001	DT	Insulation part 1

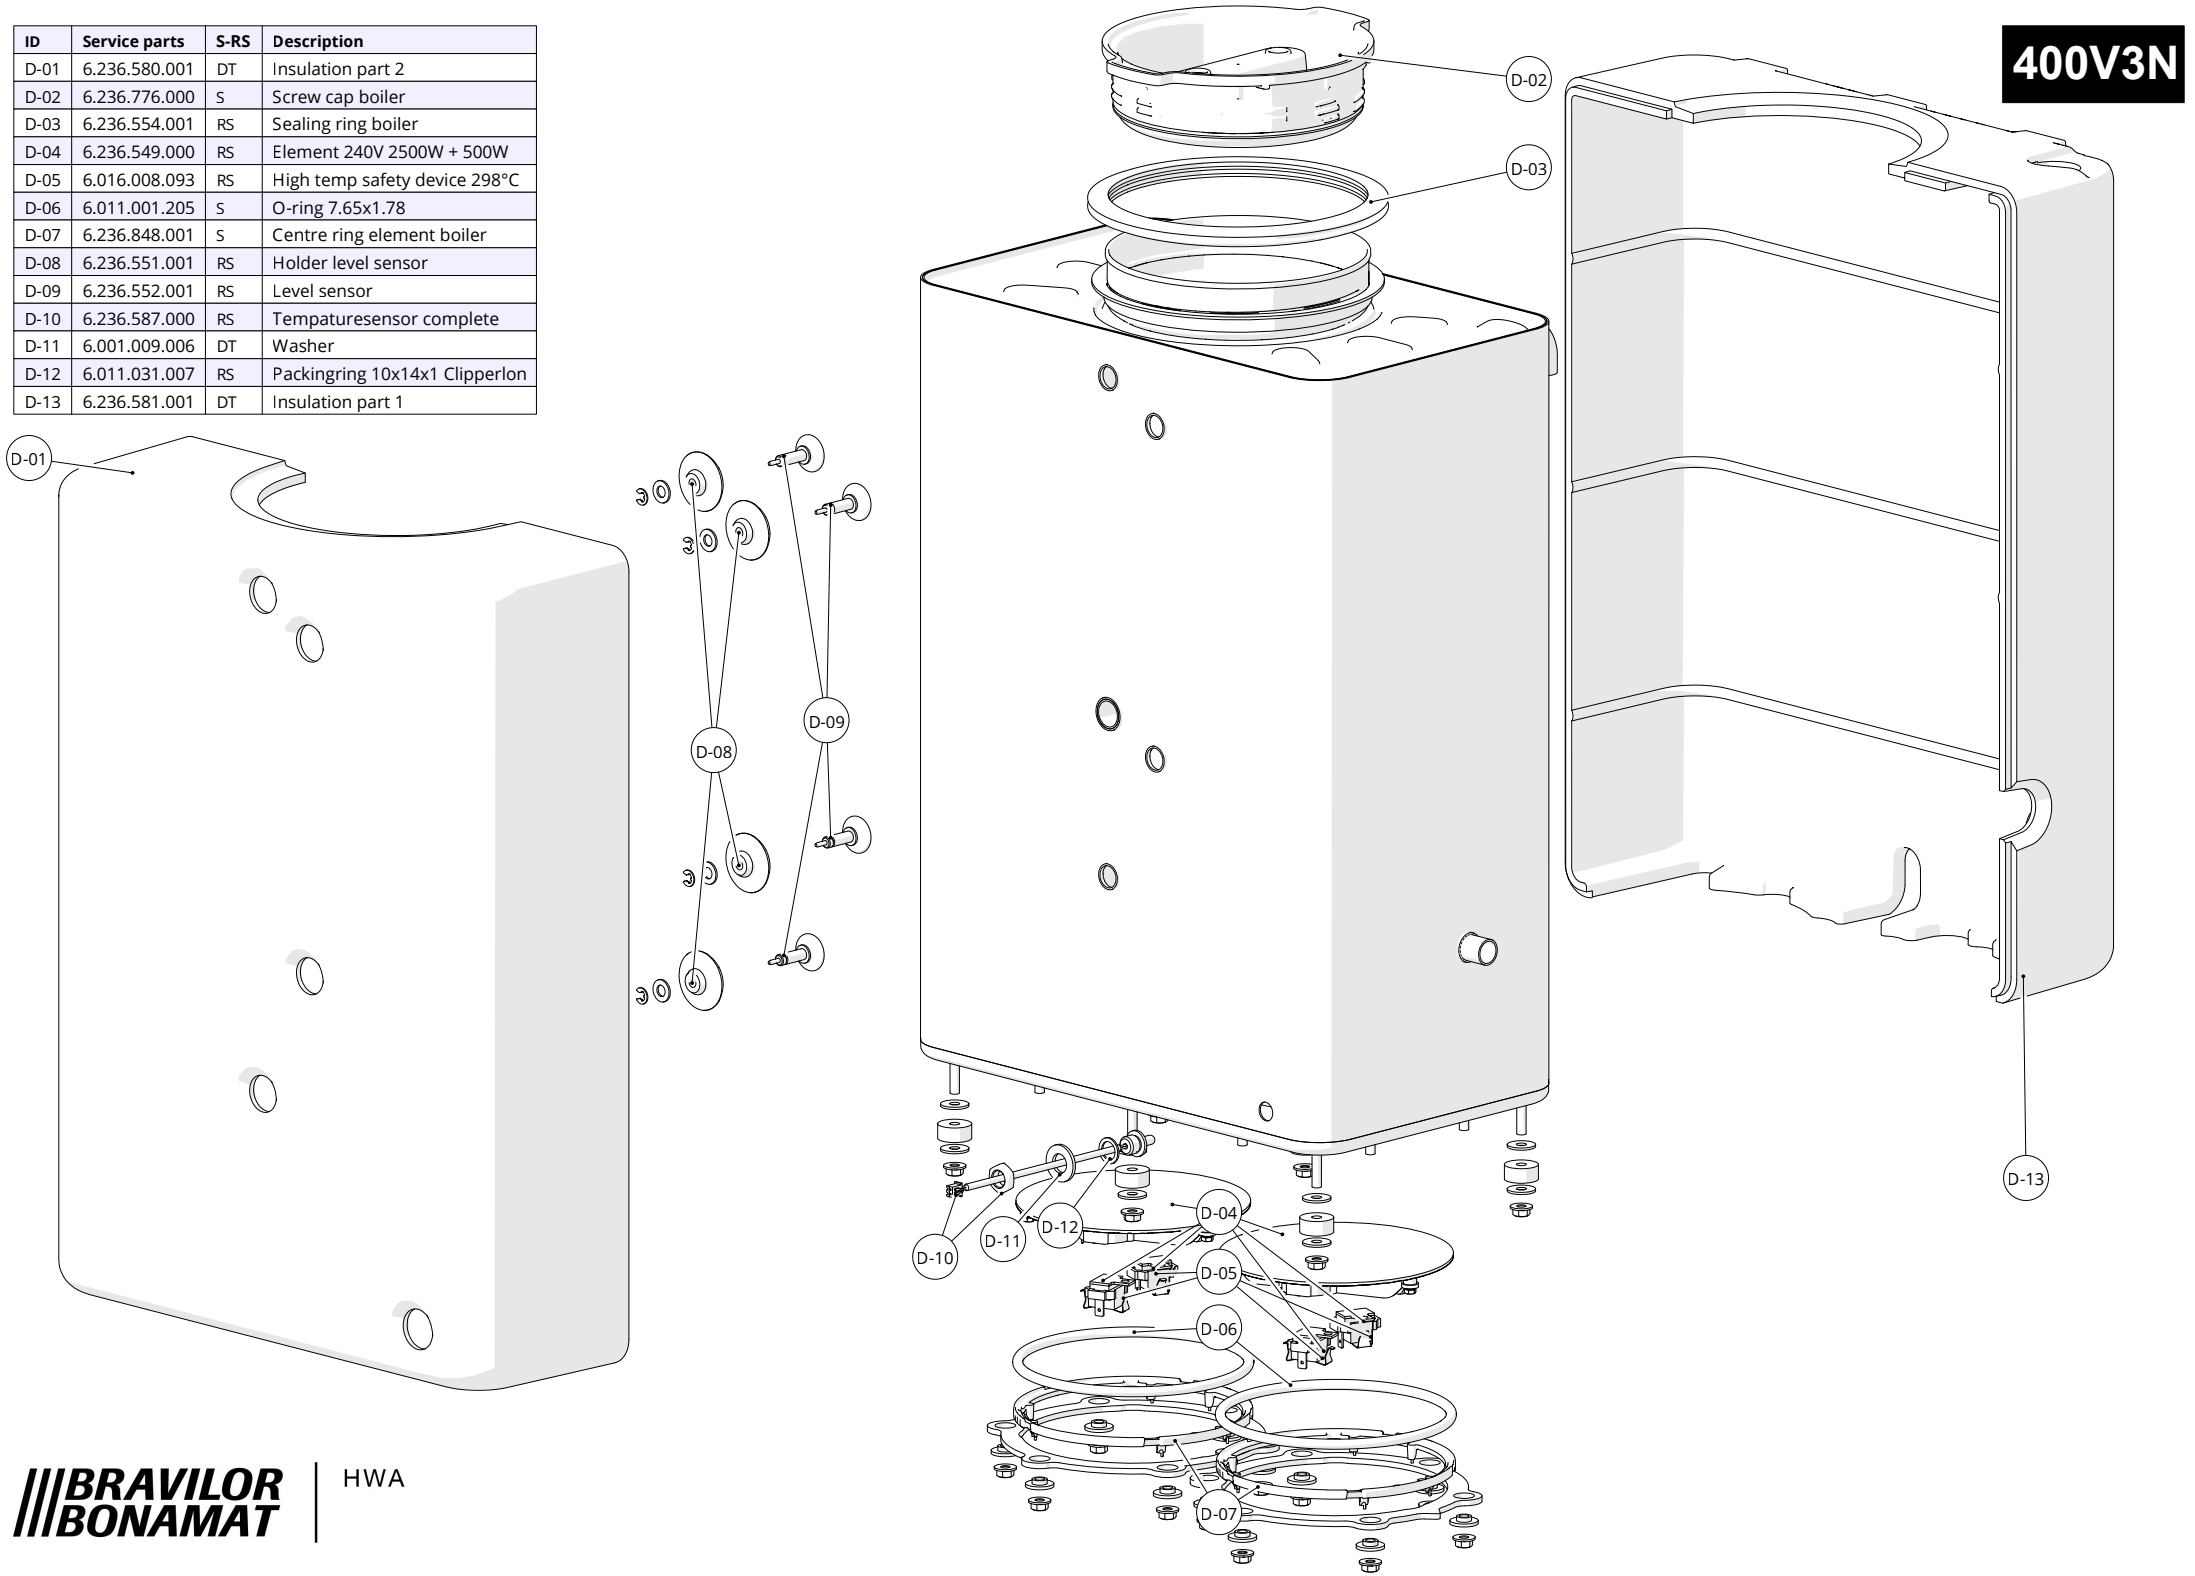

BRAVILOR BONAMAT | HWA