4. Your beverage

If you press the image of a beverage, it will be prepared immediately in the single outlet version. In all other versions, you must press the image and then start..
If you want to personalise the drink, select one of the icons in fig. 4.1a, then press the drink of your choice.

4.1 Personalise your beverage

► *These settings are used in preparing a personal beverage and are not saved.*







4.1a

Options

Strength:
- press the beans to select the beverage strength (to adjust see §6.2.8 on p.88)

Beverage size:
The letters (S=small / M=medium / L=large) represents the three steps in volume
- press the “letters” to select the beverage cup size

Decanter/cup mode:
- flip up/down the cup tray to switch between decanter/cup beverages
- or press the “image with arrow” and follow the on screen instructions



4.1b

Selecting a beverage:
- touch the beverage of your choice

► *When the ‹ › buttons are visible, it means that more than one beverage screen is available.*

► *A double outlet Bolero Turbo (XL), which can dispense drinks simultaneously, has different screens (see §4.2.2 Simultaneous dispense on p.9).*



4.1c

Preparing a beverage:
- please wait

4.2 Select your beverage

4.2.1 Cup tray folds up or down

The Bolero Turbo has a cup tray that folds up and down This cup tray is up to place a decanter and down to hold a cup. A sensor will monitor the position of the cup tray.

When the cup tray is up, the machine is in the 'decanter mode' and the beverage selection screen shows all the available decanter beverages (screen 4.2.1b). When the cup tray is down, the beverage selection screen shows all available cup beverages (screen 4.2.1a).
You can also press the cup or decanter icon (see fig. 4.1a.). When the cup tray is up, a cup icon is displayed; when it is down, a decanter icon is displayed. If the user presses this icon, a pop-up will appear with instructions on how to tilt the plate up (screen 4.2.1d) or down (screen 4.2.1c).
If the user follows these instructions, the beverage selection screen will change from cups to decanters or vice versa. The pop-up is visible for 3 seconds and disappears more quickly if the plate sensor detects a change within those 3 seconds.

When switching from decanters to cups or vice versa, the volume selector is set to the default volume. The strength selector also shows the default strength (if available).



4.2.1a



4.2.1c



4.2.1b



4.2.1d


4.2.2 Simultaneous dispense

Bolero Turbo's with ***multiple*** outlets (see §8.3 Basic machine configurations on p.139) can dispense (certain) beverages simultaneously.
Hot water cannot be dispensed at the same time as another beverage.

The selected beverage is shown on the side of the display above the outlet from which it will be dispensed. The rest of the display shows only the beverages that can be dispensed at the same time through the other outlet.

When the first drink is selected and another can be dispensed at the same time, the display will look like screen 4.2.2a, shown here for a dispense from the right outlet only.
The volume and strength now only apply to the beverage not yet selected. This part of the screen is the same as the standard beverage selection screen (with no beverages selected).

Right outlet is ready for dispensing (cups)

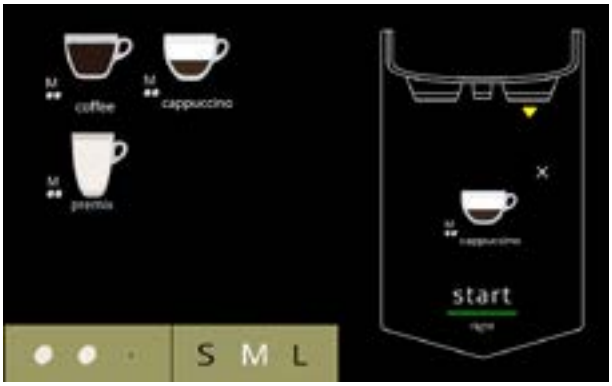

4.2.2a

Both outlets are ready for simultaneous dispensing (cups).

► *This screen always has a black background, even if a custom background has been set for the beverage selection screen.*



4.2.2b

Dispensing hot water.

► *This screen always has a black background, even if a custom background has been set for the beverage selection screen.*



4.2.2c

4.3 Cancelling instant related beverages


When a beverage is selected, immediately a cancel button appears.
The cancel button ☒ may have a limited dimension but the dosing action can always be stopped wherever the screen is touched.
The cancel function is enabled by default and can only be turned off in §6.3.11 on p.110
When a beverage is cancelled, the mixer continues to run for a few seconds to clean the mixing system.
Hot water is stopped immediately.



4.3a

Cancel a beverage:

- touch anywhere on the screen to cancel the beverage

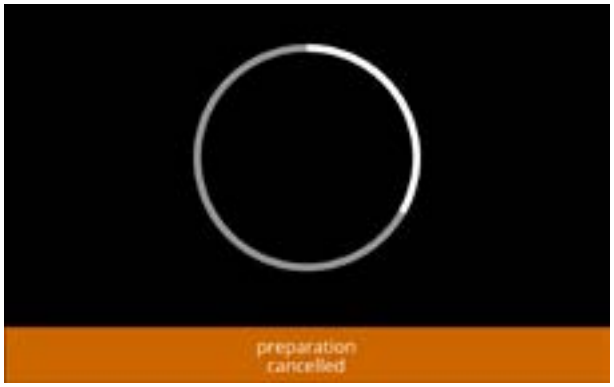

4.3b

Information screen:

- this screen is displayed to indicate the beverage has been cancelled.

4.4 Screensaver

If the screen has not been touched for a certain time, the screensaver starts.
The screensaver timer can be set (time) and disabled in §6.3.4 on p.96.




4.4a

Screensaver:
- touch anywhere on the screen to return to the beverage selection screen

4.5 Energy-saving mode (ECO)

The device is equipped with an energy-saving mode (ECO) this is used to save energy consumption when the machine is not used (e.g. overnight or during a weekend).

When energy-saving mode becomes active, the following actions are performed:
- water level control disabled
- boiler heating disabled
- backlight display set to low percentage
- fan disabled

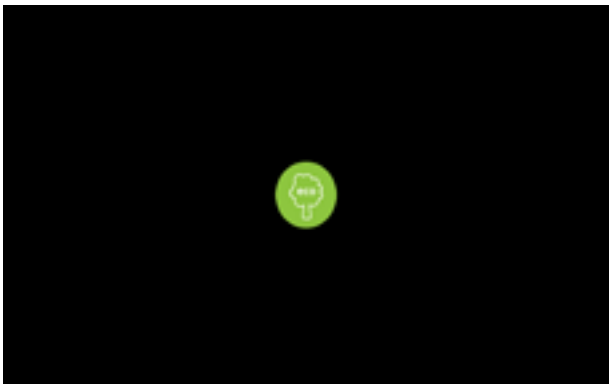

4.5a

The energy control consist out of a (customised) screensaver with a symbol as semi transparent overlay.
The energy-saving mode has priority over the screensaver.
- touch anywhere on the screen to return to the beverage selection screen

► *Depending on the switch−off time, it can take a few minutes before the machine is ready for use again.*

5. Cleaning


It is important that the Bolero is kept clean, what can be cleaned *(period depending on pollution)*:

Daily	*Weekly*	*Monthly*
start rinsing program for the mixing system, *§6.1.1 on p.19*	drip tray	ventilation system
	mixing system	canister(s)
	the outside	

► *Never clean parts of the Bolero in the dishwasher, only if this is explicitly stated.*

► *Do not use any aggressive cleaning agents.*


5.1 Weekly cleaning

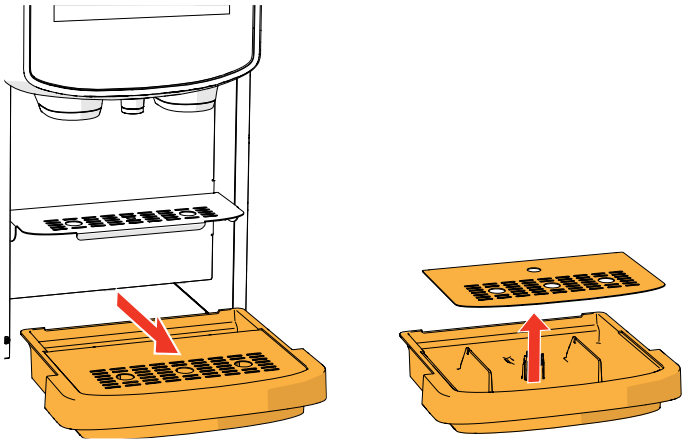

Drip-tray:


1. pull the complete drip tray forward
2. empty the drip tray
3. clean the drip tray (including grid), using *hot soapy water*
4. dry everything and place them back in place

► *Check whether the "red float" is still in place.*

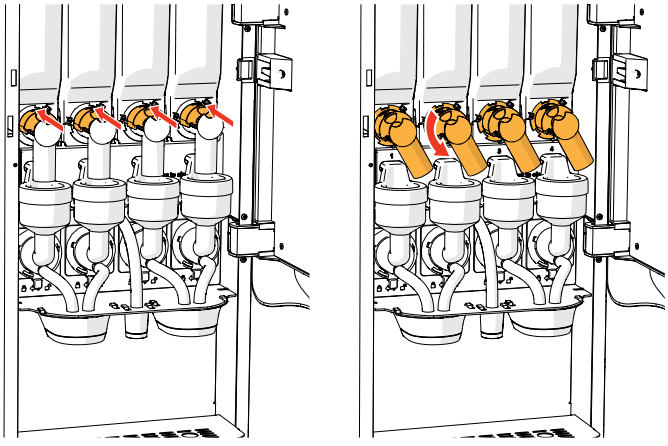



Mixing system:

1. open the door and lid
2. close the "yellow" slider of the canister outlets
3. turn the outlets counter-clockwise

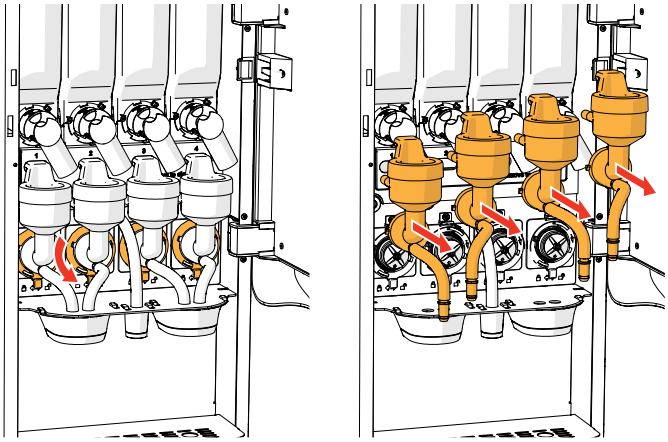


4. turn the fixation ring counter-clockwise
5. remove the hoses from the metal plate
6. remove the complete mixing system

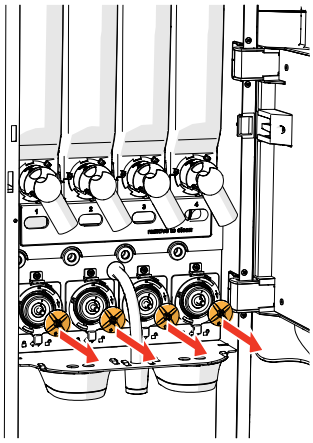


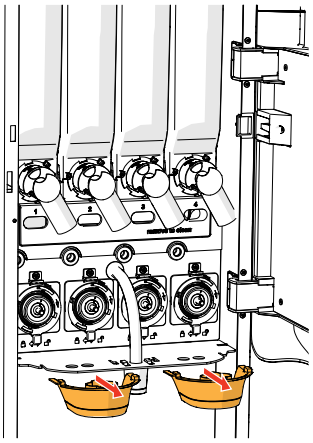

7. remove the mixer
8. remove both beverage outlets

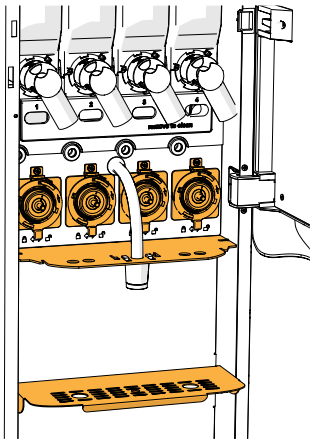

9. clean the indicated parts, using a *damp* cloth

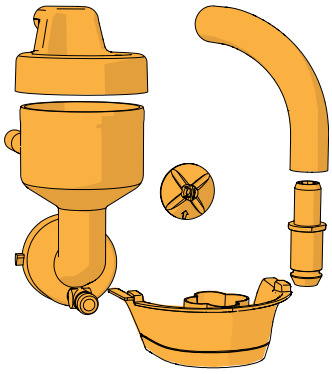


10. clean the removed parts *(dishwasher proof (<65°C))*
11. remount the mixing system in reverse order

► *Pay attention to the flat sides of the shaft and the mixer.*

12. reconnect the hose to the mixing system and the outlet
13. replace the ingredient canister(s) in the correct position
14. open the “yellow” slider of the canister(s)
15. close the lid and door


► *To prevent clogging of ingredient that has fallen into the mixing cup, it is recommended to rinse the machine after the daily cleaning procedure, see §6.1.1 on p.19.*

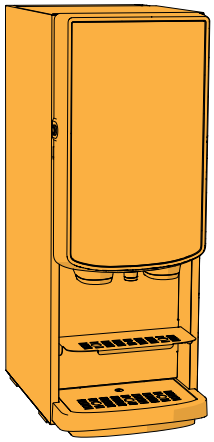

The outside:


1. switch off the machine (due to the touchscreen)
2. clean the outside with a *damp* cloth
3. switch the machine back on

5.2 Monthly cleaning

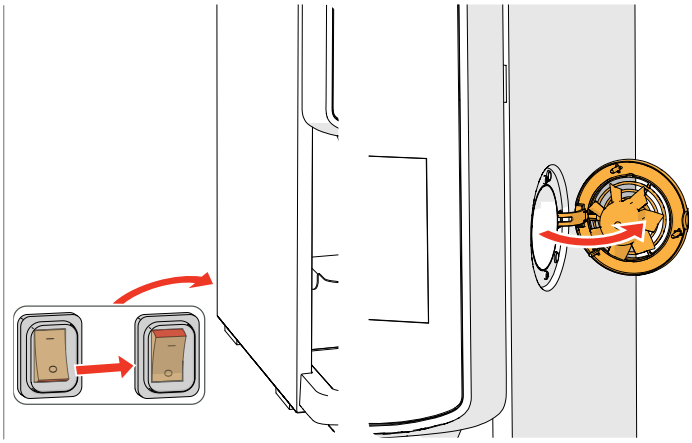


Ventilation system:


1. switch off the machine
2. open the fan to the back

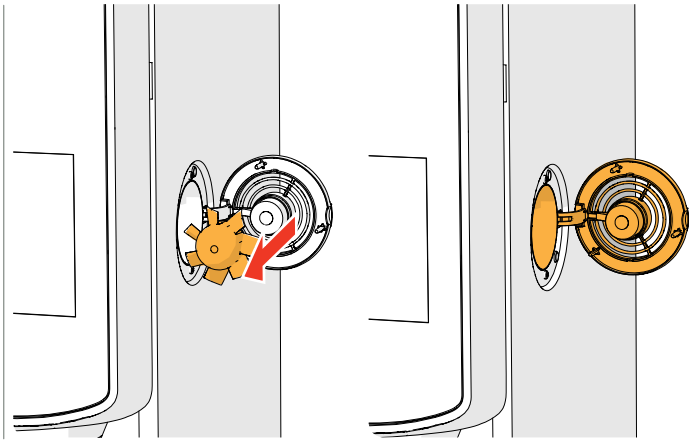

3. carefully pull the rotor of the motor
4. clean the fan housing and grid, using a *damp* cloth

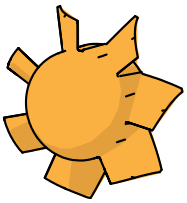



5. clean the fan rotor, using *hot soapy water*
6. dry everything and place the rotor back in place
7. switch the machine back on

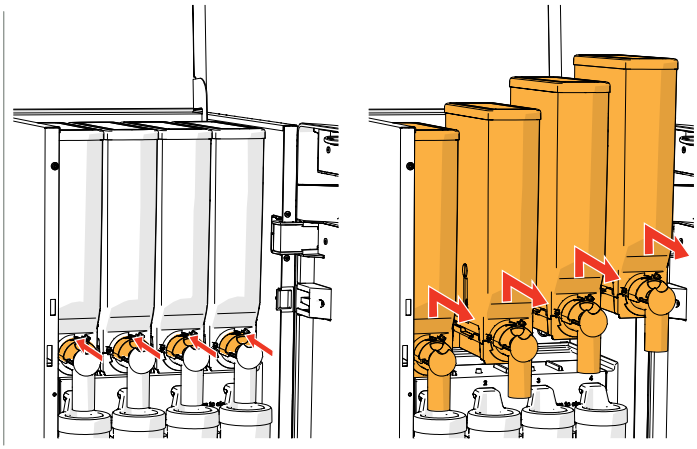


Fan duct:


1. open the door and lid
2. close the “yellow” slider of the canister outlet(s)
3. take the canister(s) out of the machine

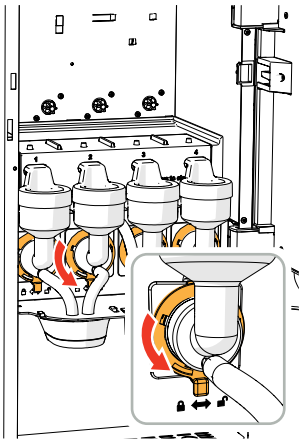

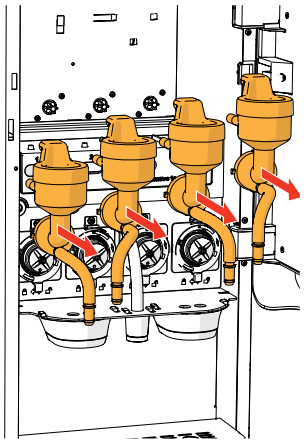


4. turn the fixation ring counter-clockwise
5. remove the complete mixing system

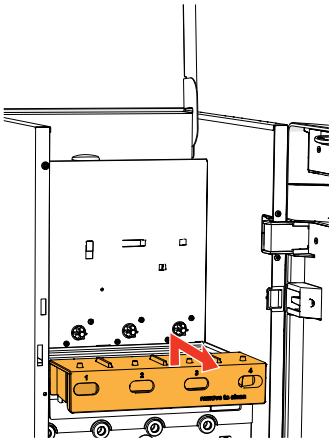





6. remove the fan duct
7. clean the fan duct, using *hot soapy water*

► *Be aware that everything has been dried very well.*

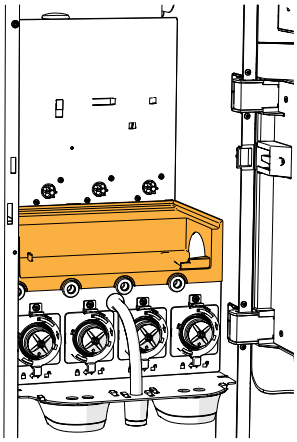

8. clean the inside of the machine with a *damp* cloth
9. replace the fan duct
10. replace the canister(s) in its/their correct position
11. open the “yellow” slider of the canister(s)
12. close the lid and door

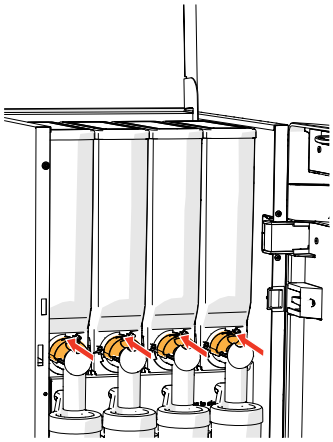


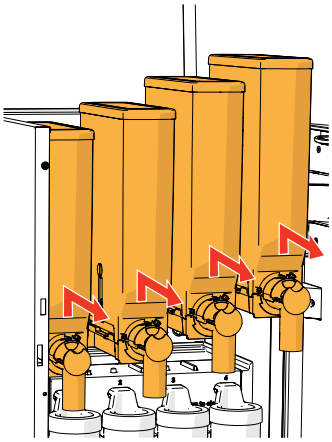


Canister(s):


1. open the door and lid
2. close the “yellow” slider of the canister outlet(s)
3. take the canister(s) out of the machine


4. pour the ingredients in a dry bowl
5. unlink the outlet from the canister

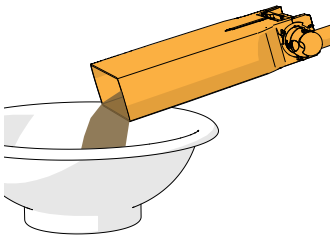





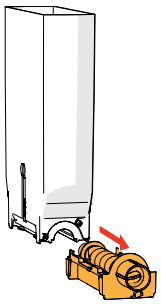

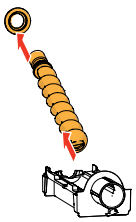

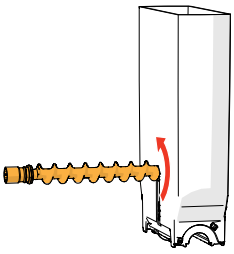

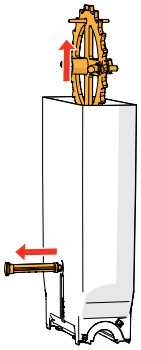

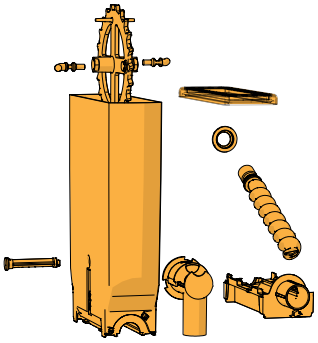

6. take apart the canister(s)
7. clean the canister and outlet with a brush

► *Do **not** use water to prevent the ingredients from clumping and clogging the canister.*

8. refill the canister(s)
9. replace the canister(s) in its/their correct position
10. open the “yellow” slider of the canister(s)
11. close the lid and door

► *To prevent clogging of ingredient that has fallen into the mixing cup, it is recommended to rinse the machine after the daily cleaning procedure, see §6.1.1 on p.19.*