

6.3.10g

Enter the PIN code:
- press ◀ or ▶ to scroll through the numbers
- press on the number to select
- press ⌫ to delete a PIN number, see left corner
- press ✓ to verify the PIN code entered and go to the next screen

► *When the PIN code does **not** match, you will receive another attempt to enter the correct code.*



6.3.10h


Information screen:
- the next screen is displayed after a few seconds



6.3.10i

Enter the new PIN code:
- press ◀ or ▶ to scroll through the numbers
- press on the number to select
- press ⌫ to delete a PIN number, see left corner
- press ▶ when the 4 digit PIN code is entered

► *When four numbers are entered the next screen is displayed to verify the PIN code.*

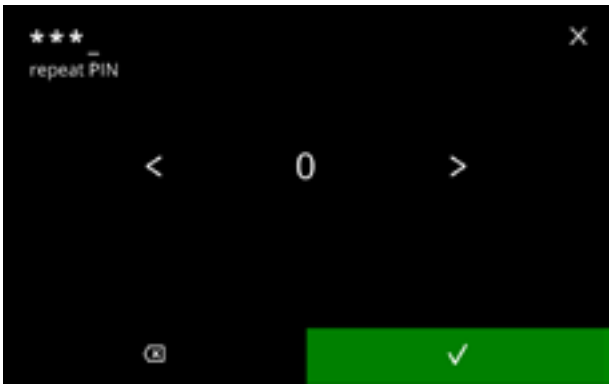

6.3.10j

Verify the new PIN code:
- press ◀ or ▶ to scroll through the numbers
- press on the number to select
- press ⌫ to delete a PIN number, see left corner
- press ✓ to verify the PIN code entered and go to the next screen


► *When the PIN code does **not** match, you will receive another attempt to enter the correct code.*

6.3.10k



Information screen:
- screen 6.3.10a is displayed after a few seconds

6.3.10l

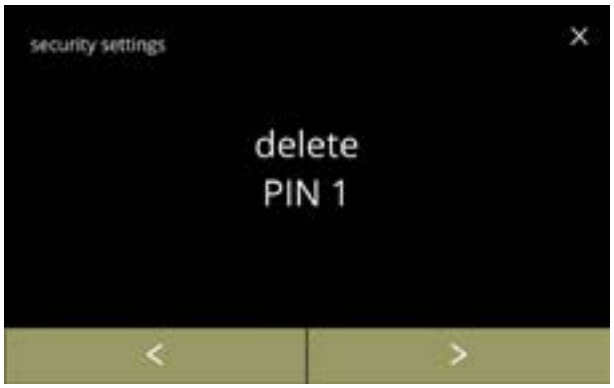

Delete PIN 1:
- press "*delete PIN 1*" to confirm and go to the next screen
- press ‹ or › to go to screen 6.3.10f

6.3.10m



Enter the PIN code:
- press ‹ or › to scroll through the numbers
- press on the number to select
- press ⌫ to delete a PIN number, see left corner
- press ✓ to verify the PIN code entered and go to the next screen


► *When the PIN code does **not** match, you will receive another attempt to enter the correct code.*

6.3.10n




Information screen:
- the next screen is displayed after a few seconds

6.3.10o

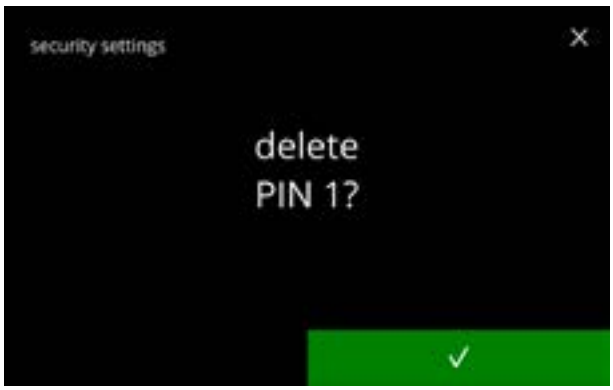

Confirmation screen:
- press ☒ to cancel
- press ☑ to confirm and go to the next screen

6.3.10p

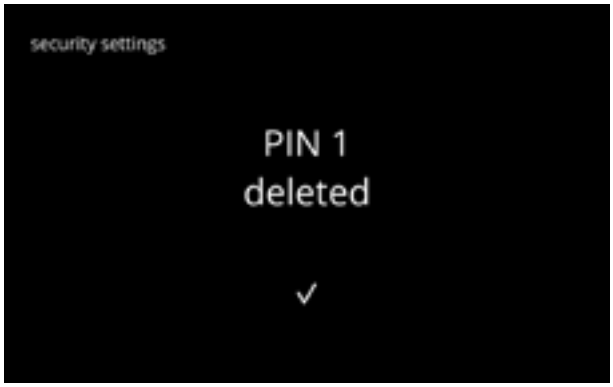

Information screen:
- screen 6.3.10a is displayed after seconds

6.3.10q



Change the security settings:
- press *"PIN 2 for limited access" to select*:

  ► *The screens that follow are the same as PIN 1 (only PIN 1 is replaced by PIN 2 in the screens 6.3.10b to 6.3.10p).*
- press ‹ or › to go to screen 6.3.10a for PIN 1

6.3.11 Connected devices

In this menu settings of external devices connected to the machine can be set or modified.
In case of a connected payment module, the possibility to cancel a beverage can be disabled.
Devices that can be connected:

- payment devices (with and without coins)

► *A payment system requires an external power supply, ask your retailer about the options.*

6.3.11



Select or configure the connected devices:

- press "*connected devices*" to confirm
- press ‹ or › to scroll through the machine menu

► *If no external device is connected to the machine, the text on this screen will remain greyed out.*

6.3.11a




Payment device:

► *The checkbox gives the possibility to decide whether a paid beverage could be cancelled or not (the money is not returned).*

- press › to confirm

6.3.11b

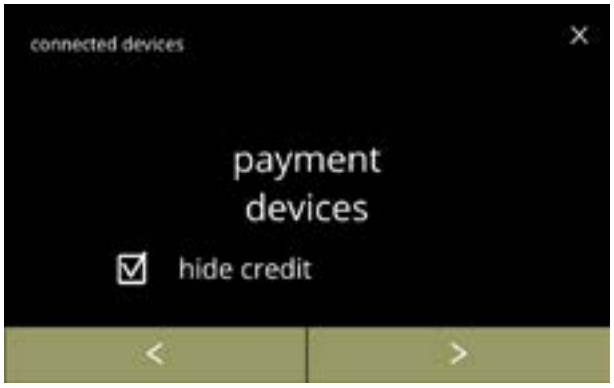


Payment device:

► *The checkbox gives the possibility to decide whether to hide the credits or not.*

- press › to confirm

► *The "hide credit" option is particularly useful for payment devices that allocate a curtain credit amount to ensure there is enough credit to pay for the beverage (such as a self-service petrol station).*

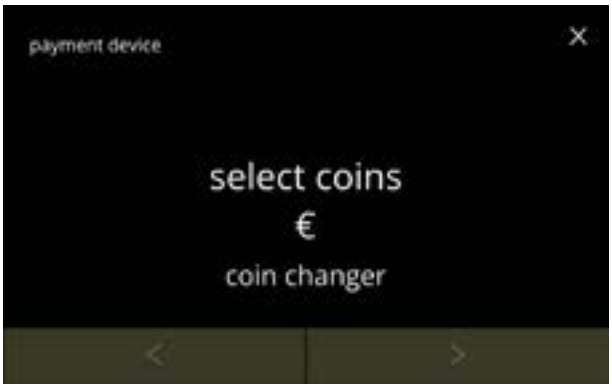


6.3.11c

Select/configure the payment device:
- press "*select coins*" to confirm
- press ‹ or › to scroll for more connected payment devices

► *The availability of the navigation buttons depends on the number of connected devices.*

► *Up to 2 payment devices can be connected.*

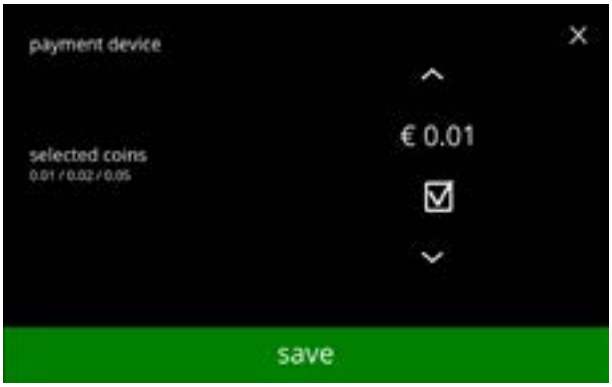


6.3.11d

Select which coins can be used:
- press ^ or v to scroll through the available coins
- press the checkbox to set the coin
- press save to confirm and go to the next screen

► *Save is only active if something has changed.*

Information screens:
- screen 6.3.11 is displayed after a few seconds

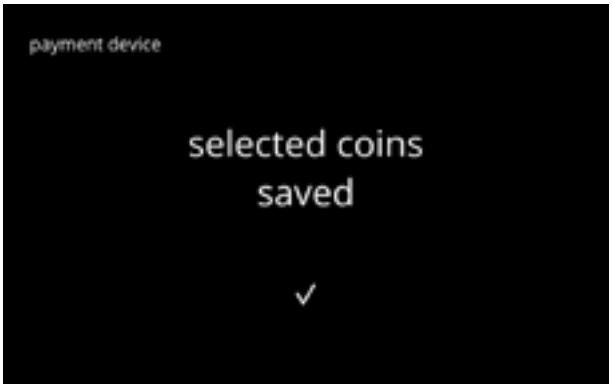



6.3.11e

6.3.12 Reset to factory settings

A factory reset returns the machine to its original state.


Exceptions are:
- firmware
- machine counter (only the day and beverage counters are reset)
- descale counter
- water filter
- firmware history

6.3.12



Reset to factory settings:
- press "*factory settings*" to confirm
- press ‹ or › to scroll through the machine menu

6.3.12a

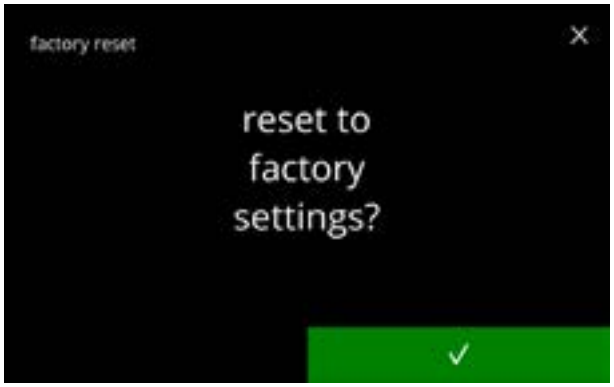

Confirmation screen:

► *First save the customized data, see* *§6.4.5 on p.124*.

- press ☑ to confirm

6.3.12b



Progress screen
- wait until the process is finished

6.3.12c



Information screen:
- the next screen is displayed after a few seconds

6.3.12d



Information screen:
- the machine starts automatically (this takes a while)

6.3.13 Set blocking times

It is possible to block the dispensing of beverages for certain periods.
The option can be chosen to enable hot water dispensing during blocking times.
During those blocking times all the beverage icons on the beverage selection screen are inactive and grey out. If a greyed out button is pressed when a blocking time is active, the machine will display screen 6.3.13e for 3 seconds.
In case hot water is available during the blocking times, the hot water icon is the only active icon. The checkbox 'enable hot water during blocking times' is only active once at least one blocking time is set.
Up to 4 blocking times can be set, each represented by a white button.

6.3.13




Set the bocking times:
- press "*temporarily block beverage dispensing*" to confirm
- press ‹ or › to scroll through the machine menu

6.3.13a



Selection screen:
- press the blocking time to select and go to the next screen

6.3.13b

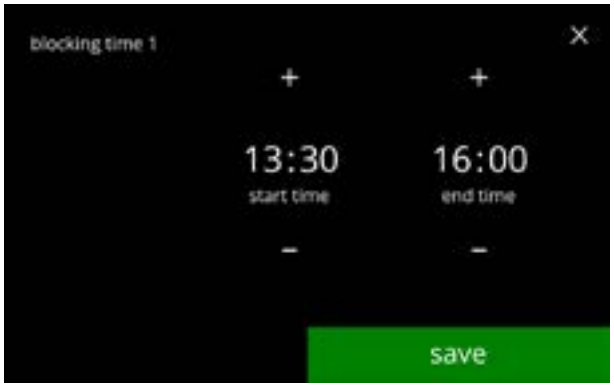


Change the time:
- press ✚ or ▬ to set the begin and end time with steps of 15 minutes (= setting)
- press save to confirm

► *If a blocking time has been set, the white button will show a green outline, see screen 6.3.13d.*


► *If the start and end times are the same, the blocking time is **not** set.*

6.3.13c

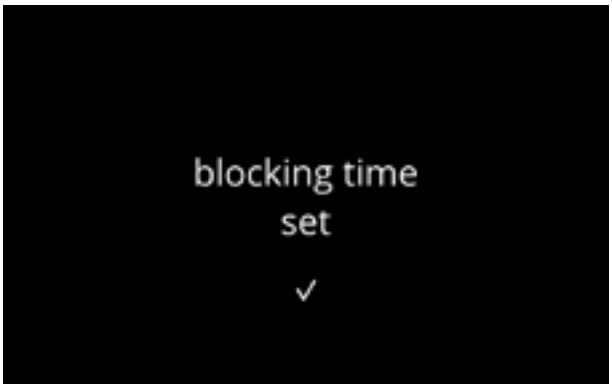

Information screen:
- the next screen is displayed after a few seconds

6.3.13d

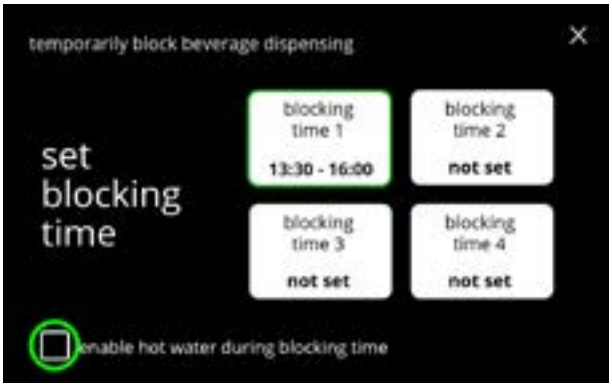

Enable hot water:
- press the checkbox to enable hot water during blocking time
- press another blocking time to set
- press ☒ and return to screen 6.3.13

6.3.13e



Information screen:
- If a greyed out button is pressed when a blocking time is active, the machine will display this screen for 3 seconds.

6.3.14 Set automatic ON/OFF times

The main purpose of this function is to make sure the machine is ***ready for use*** at a defined time and ***shuts down*** at a defined time.
If the start time is set e.g. om 8.00 o'clock in the morning, this means the machine must be ready to dispense beverages from that time on. If the end time is set to e.g. 18.00 all the processes are switched off at that time. The display will show a sign-of-life, so the users can understand the machine is in some kind of 'hibernate-modus'. The sign-of-life is the strength icon, the stylized coffee bean , moving over the screen (in the same way as the tree icon moves in eco-modus). The display intensity is set to an as low as possible value, so the strength icon is just visible, see screen 6.3.14f.

6.3.14



Set the automatic ON/OFF times:
- press *"set the automatic ON/OFF times"* to confirm
- press ‹ or › to scroll through the machine menu

6.3.14a



Selection screen:
- press a day to select and go to the next screen

► *If an automatic time is set (standard ON), the white button will show a green outline, see screen 6.3.13d.*

6.3.14b



Change the time:
- press ⌃ or ⌄ to select the possible options
  » ON 24 hours
  » OFF 24 hours
- press save to confirm and go to screen 6.3.14d ***or***
  » set specific time
- press › to go to the next screen