
6.1.2w

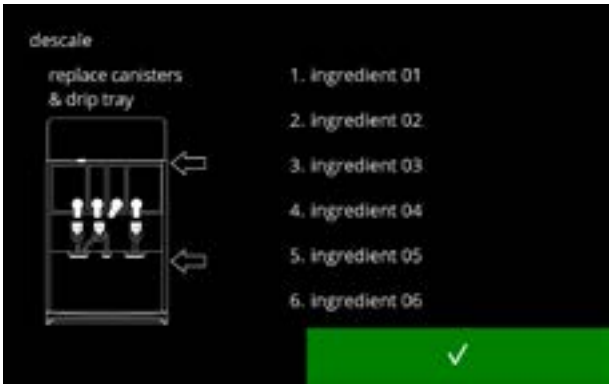

Descaling - ending:

- follow the instructions on the screen
- press ☑ to confirm every things has been restored

► *The number / position of the canisters may vary per configuration, see §8.3 on p.139.*


6.1.2x



Information screen:

- screen 6.1.2 is displayed after a few seconds

6.1.2y

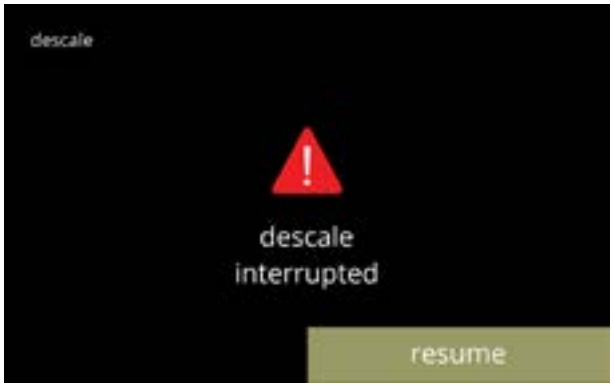

Warning screen interrupted descaling process:


- press resume to continue the procedure where it was interrupted and to finish the descaling process

6.1.3 Water filter management

If a water filter is installed, replaced or removed must be confirmed in the software so that the counter is updated. A water filter lessens lime-scale deposits and reduces impurities in the water. The Bolero also does not need to be descaled so often, see §8.1 on p.138.
Additionally, it ensures a consistent quality of the hot beverage in both taste and aroma.


water filter settings	default	minimum	maximum
capacity (litre)	*OFF*	100	10000
months shelf life		1	24

6.1.3

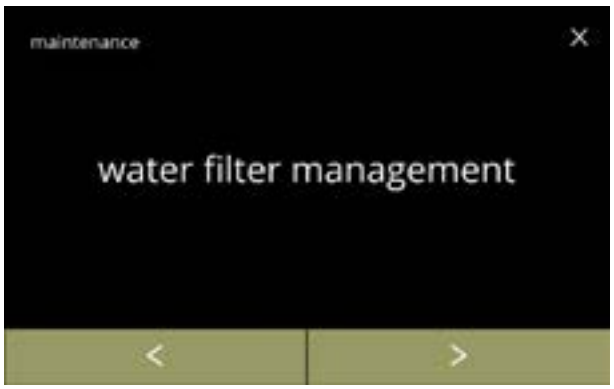

Install, replace or remove the water filter:
- press "*water filter management*" to select
  - » water filter **already** installed go to screen 6.1.3c
  - » water filter **not yet** installed, go to the next screen
- press ‹ or › to scroll through the maintenance menu


6.1.3a

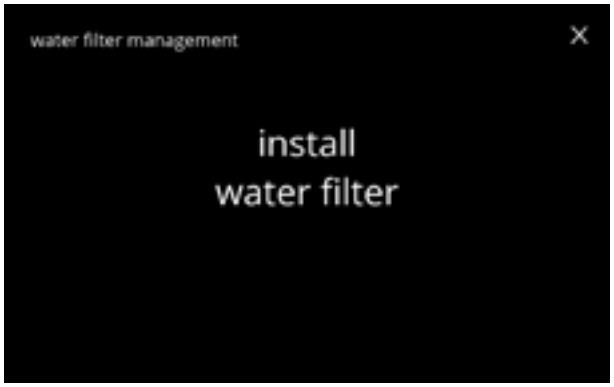

Installing:
- press "*install water filter*" to select

► *Read the instructions that come with the filter.*

6.1.3b

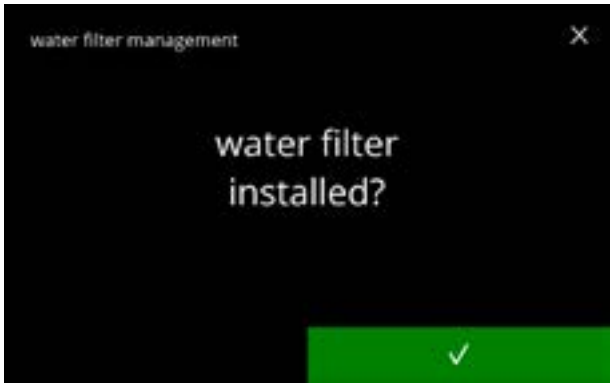

Confirmation screen:
- install the water filter (conform its instructions)
- press ☑ to confirm and go to screen 6.1.3f

6.1.3c



Replacing:
- press *"replace water filter"* to select and go to the next screen
- press ‹ or › to scroll through the water filter sub-menu
  » water filter settings (6.1.3e)
  » uninstall water filter (6.1.3h)

6.1.3d




Replace the water filter (according to its own instructions).
- press ☑ to confirm and go to screen 6.1.3f

6.1.3e



Set notification:
- press *"water filter settings"* to select and go to the next screen
- press ‹ or › to scroll through the water filter sub-menu
  » uninstall water filter (6.1.3h)
  » replace water filter (6.1.3c)

6.1.3f

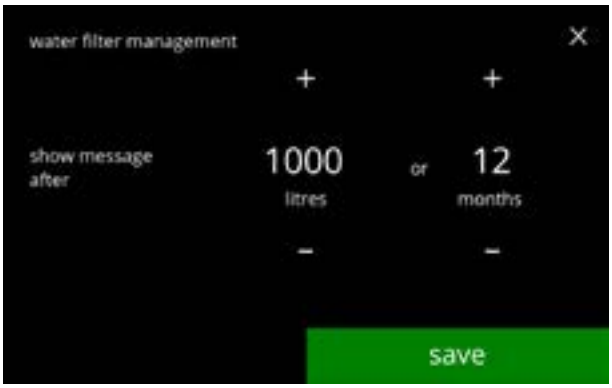

Set the *"replace water filter"* message:

► *When the water filter is first installed, both values start at 0 and must be changed before* save *is shown.*

► *When replacing a water filter, the previous values are set and* save *is shown immediately.*


- press ✚ or ▬ when the message should appear

► *Both values are required*

- press save to confirm

Information screens:
• screen 6.1.3 is displayed after a few seconds

6.1.3g

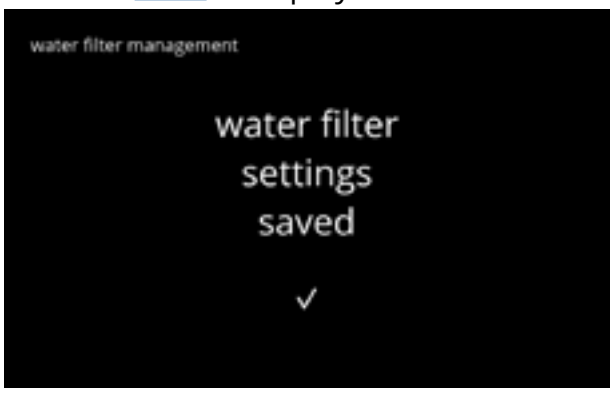



6.1.3h



Permanent removal:
• press *"uninstall water filter"* to select and go to the next screen
• press ‹ or › to scroll through the water filter sub-menu
  » replace water filter (6.1.3c)
  » water filter settings (6.1.3e)

6.1.3i



Uninstall the water filter:
• physically remove the water filter
• press ☑ to confirm

6.1.3j





Information screen:
• screen 6.1.3 is displayed after a few seconds

6.1.4 Hot-key rinsing function

To prevent clogging, it is necessary to rinse the mixing system several times a day.
For this purpose, it is possible to set up a so-called hot-key on the screen.
In this menu it is possible to put the hot-key rinsing function active or inactive in the beverage selection screen.
Default: OFF


► *To use the hot-key rinsing function press and hold for five seconds the S M L button on the beverage selection screen, the rinsing of the mixing system starts immediately.*

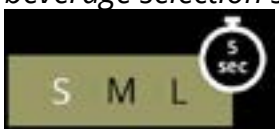

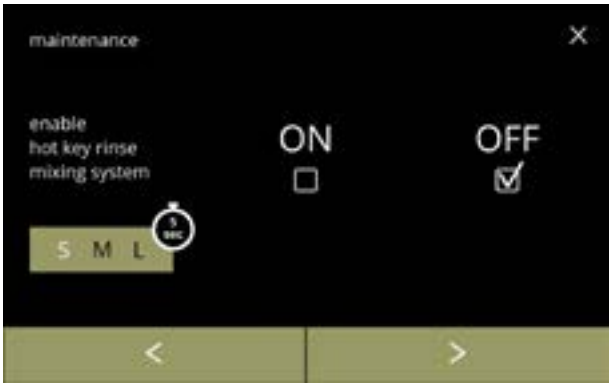

6.1.4

Availability of hot-key:
- press the checkbox below *"ON"* to make the hot-key visible
- press < or > to scroll through the maintenance menu

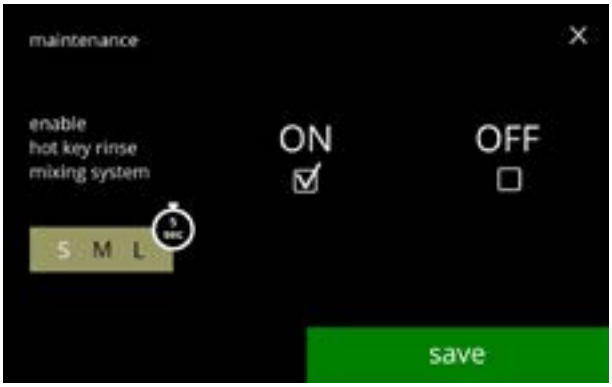

6.1.4a

Setting the hot-key:
- press save to confirm

► *Save is only active if something has changed.*

6.1.5 Cleaning management

In this menu, it is possible to set a time for a cup counter to display a warning before rinsing the machine.
The warning can always be cancelled without rinsing the machine.
Default: ON

6.1.5



Cleaning management
- press "*message rinse mixing system*" to select
- press ‹ or › to scroll through the maintenance menu

6.1.5a



Setting rinse message:
- press the checkbox to set the message
  - » select OFF and save:
    go to the next screen
  - » select ON and ☑:
    go to screen 6.1.5c

6.1.5b




Information screen:
- screen 6.1.5 is displayed after a few seconds

6.1.5c




Set day or time:
- press ➕ or ➖ to set the number of cups or days after which the warning should pop-up
- press ☑ to confirm and go to the next screen
- press ☇ to go back to screen 6.1.5a

6.1.5d

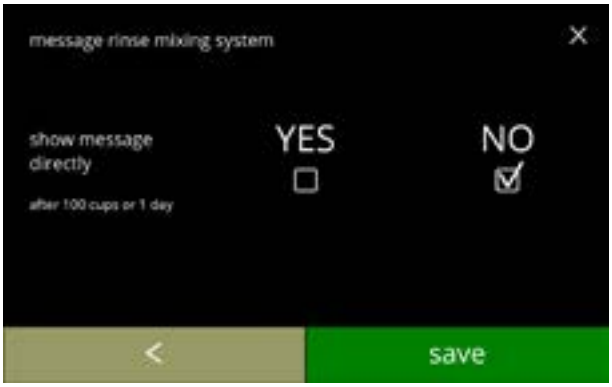

Message direct or at a later time:
- press the checkbox to set the message timing:
  - » select YES and save:
    go to the second screen of 6.1.5f
  - » select NO and ☑:
    go to the next screen
- press ☇ to go to the previous screen

6.1.5e

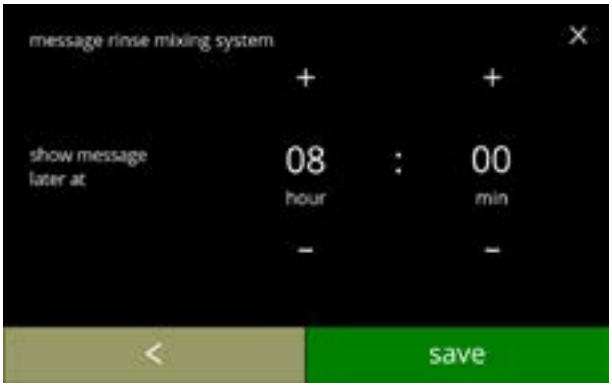

Set the timer:
- press ➕ or ➖ to set the hour and minutes
- press save to confirm and go to the first screen of 6.1.5f
- press ☇ to go to the previous screen

6.1.5f

Information screens:
- screen 6.1.5 is displayed after a few seconds





6.1.6 Descale management

It is important to know the correct hardness of the water at the location where the Bolero is used (for setting the descaling signal).
If necessary, ask the local water company for the hardness of the water supplied or measure the hardness of the water supplied on site with a water hardness tester (according to the corresponding instructions).


Default: ON (with average water hardness)
See also §8.1 on p.138.

6.1.6



Descale management
- press "*descale management*" to confirm
- press ‹ or › to scroll through the maintenance menu

6.1.6a

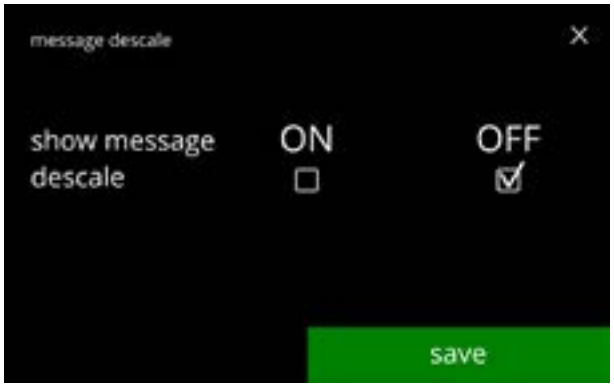

Descale message:
- press *the* check*box* to set the message
  - » select OFF and save:
    go to the next screen
  - » select ON and ☑:
    go to screen 6.1.6c

6.1.6b



Information screen:
- screen 6.1.6 is displayed after a few seconds

6.1.6c



Water hardness:
- press ⌃ or ⌄ to set the water hardness

► *When a water filter is used, the message can be delayed, select 0-4 °DH.*

» select a value between 4/8 and 18/30 °DH; press ☑ to confirm and go to screen 6.1.6g

» select 0/4 °DH; press ☑ to confirm and go to the next screen

6.1.6d



Volume override:
- press save to confirm and go to screen 6.1.6h
- press override to adjust the volume for the notification and go to the next screen

► *When a water filter is used the volume can be adjusted.*

6.1.6e



Increase maximum standard volume:
- press + or - to set the volume
- press save to confirm and go to the next screen
- press default to go to the previous screen

► *The override volume is shown in orange and can be set from 2100 till 9999 litre.*

► *If used incorrectly, the descale message can be delayed for too long, allowing lime-scale to build up.*

6.1.6f



Information screen:
- screen 6.1.6 is displayed after a few seconds

6.1.6g



Standard volumes/water hardness:
- press save to confirm and go to the next screen

6.1.6h



Information screen:
- screen 6.1.6 is displayed after a few seconds