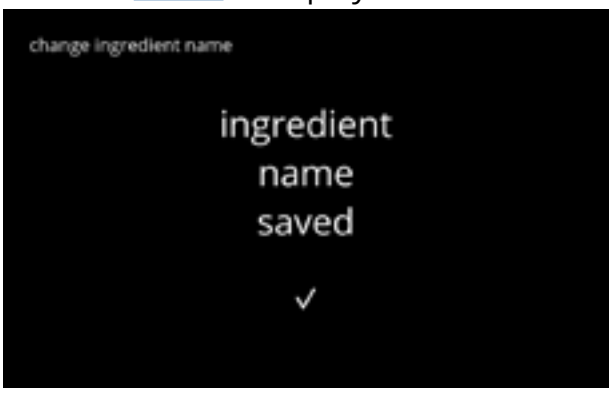
6.2.7c	Information screens: • screen 6.2.7a is displayed after a few seconds  

6.2.8 Customize beverage strength

In this menu, the standard strength on the beverage selection screen can be set.
The step size (%) of the strength can also be adjusted (0-20%).
This default setting applies to all beverages in the beverage selection screen.

step size (6.2.8a)	
1%	minimum
10%	standaard
20%	maximum

	standard strength setting (6.2.8c)
● · ·	90%
● ● ·	100%
● ● ●	110%

► *Setting the step size to 0% turns off the strength control and the button disappears from the beverage selection screen.*

6.2.8



Set the beverage strength increase (%):
- press "*customize beverage strength*" to confirm
- press ‹ or › to scroll through the beverage menu

6.2.8a



Set the step size (%) of the beverage strength:
- press + or – to set the step size (%) of the strength button and go to the next screen
- press ‹ or › to go to screen 6.2.8c to set the default strength

► *Setting the step size to 0% turns off the strength control and the button disappears from the beverage selection screen.*

6.2.8b



Confirm changes:
- press save to confirm


► *Save is only active if something has changed.*

6.2.8c



Change the default strength:
- press ⌃ or ⌄ to set the default strength
- press ‹ or › to scroll through the beverage strength menu

6.2.8d

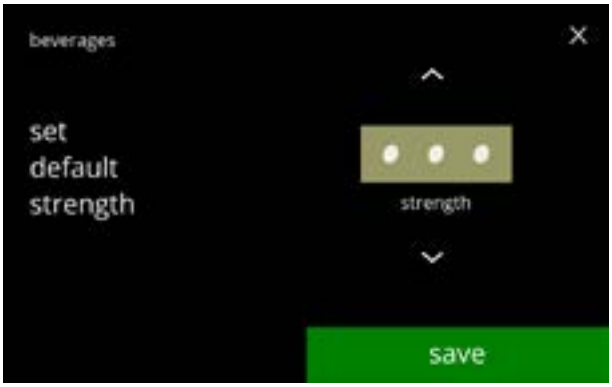

Confirm changes:
- press save to confirm

► *Save is only active if something has changed.*



No selectable strength button:

► *Setting the step size to 0% (screen 6.2.8a) turns off the strength control and the button disappears from the beverage selection screen.*

6.2.9 Set default volume


In this menu, the standard volume of the beverage selection screen can be set.
This default setting applies to all beverages in the beverage selection screen.
The amount of ml per beverage can be adjusted in the recipe menu §6.2.5 on p.69.

6.2.9



Change the default volume:
- press ⌃ or ⌄ to set the default volume
- press ‹ or › to scroll through the beverage menu

6.2.9a

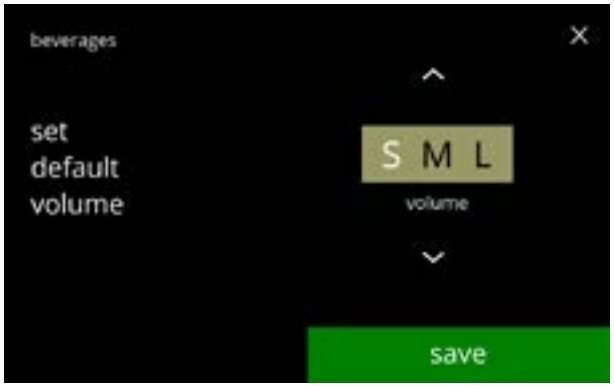

Confirm changes:
- press save to confirm

► *Save is only active if something has changed.*

6.2.10 Simultaneously dispensable beverages


This ***information menu*** can be used to check which beverages can be dispensed simultaneously.
The beverages that can be dispensed on both sides at the same time depend on the ingredients that are linked to the mixing systems that are connected to the respective side of the beverage outlets.
The water selector, which supplies the water to the different mixing systems, also has a certain influence on the beverages that can be dispensed at the same time.

6.2.10



Check simultanuous dispensed beverages
- press "*Simultaneously dispensable beverages*" to confirm
- press ‹ or › to scroll through the beverage menu

6.2.10a

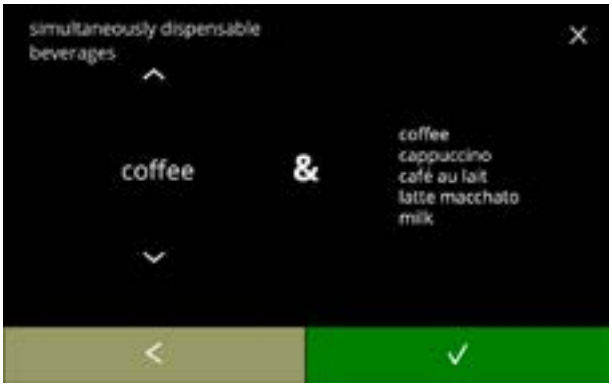


Information screen:
- press ^ or v to select a beverage
- press ✓ to confirm

► *On the right side of the screen a list of all beverages that can be dispensed at the same time as the selected beverage on the left.*

6.3 Machine menu

You can programme the machine settings in the this menu.
Select one of the available options:

- press ‹ or › to select the next option of the “machine menu”
- press the *“text area”* to select the next level for that menu
- press ☒ to go back to chapter 6. Programming menu on p.17

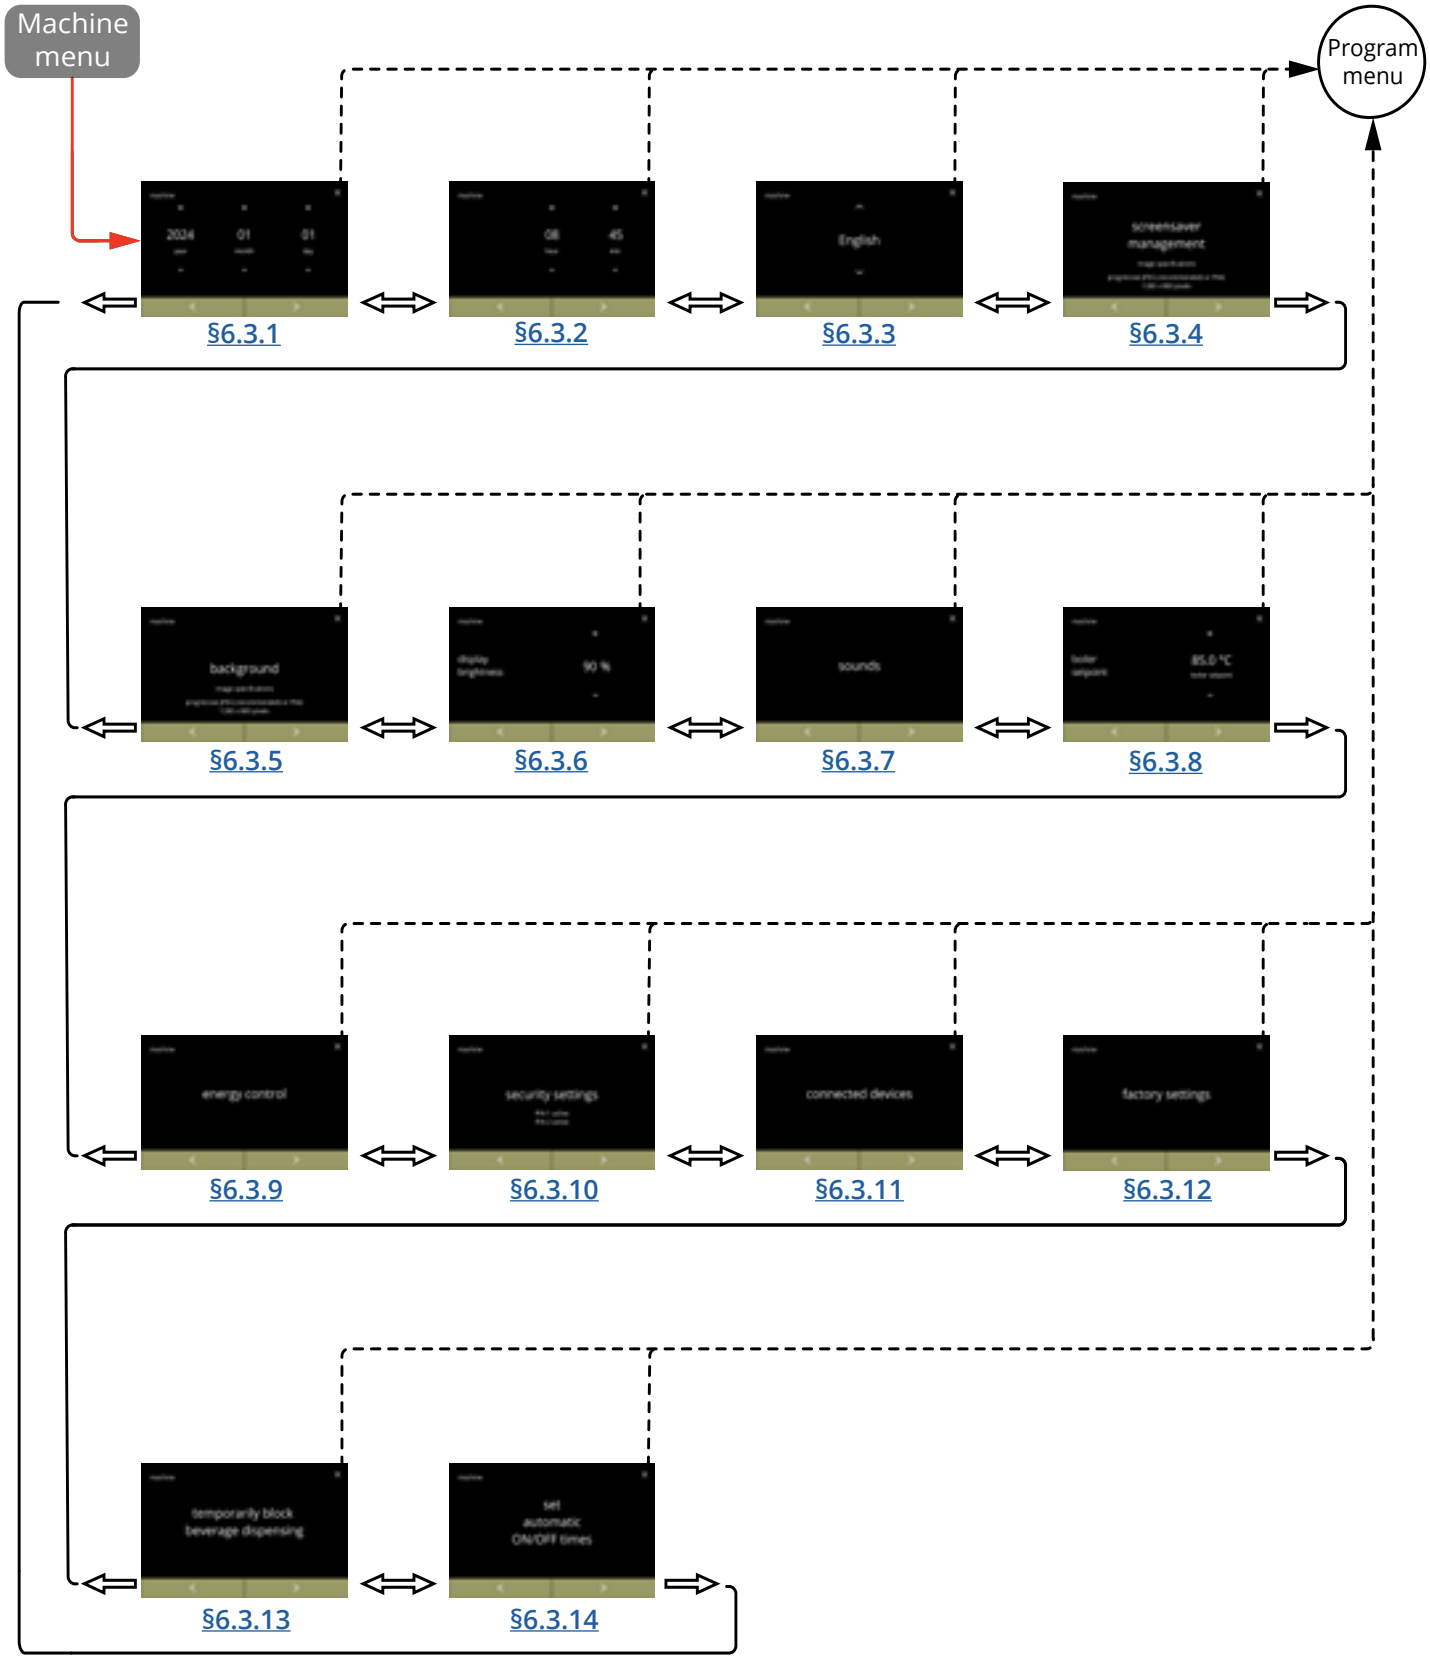

6.3.1 Date


Adjust the year/month/date.

6.3.1



Change the date:
- press ⊞ or ⊟ to set the year, month or day
- press ‹ or › to scroll through the machine menu

6.3.1a

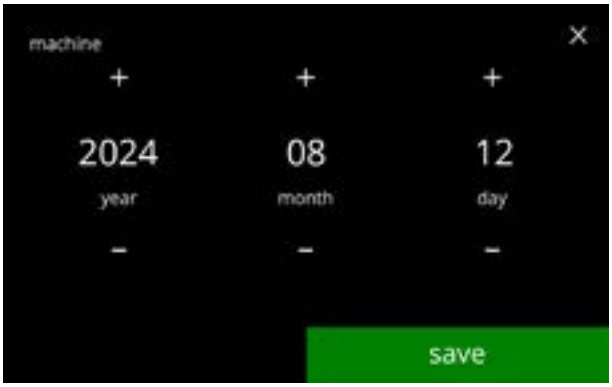


Confirm changes:
- press save to confirm

► *Save is only active if something has changed.*

6.3.2 Time

Adjust the time.


6.3.2

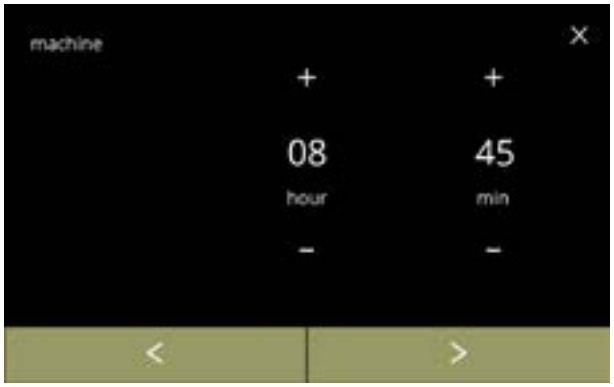

Change the time:

- press ⊞ or ⊟ to set the current hour and minutes
- press ‹ or › to scroll through the machine menu

6.3.2a

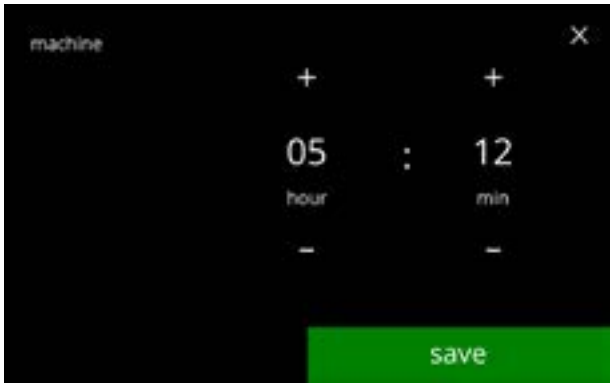

Confirm changes:

- press save to confirm

► *Save is only active if something has changed.*

6.3.3 Language

The available languages are:

- English
- Spanish
- French
- Italian
- Dutch
- Norwegian
- Polish
- Portuguese
- Swedish
- Danish
- German

Default: English

6.3.3



Change the language:

- press ⌃ or ⌄ to scroll through the available languages
- press the language to set as the current language
- press ‹ or › to scroll through the machine menu

6.3.3a



Confirm change:

- press save to confirm

► *Save is only active if something has changed.*

6.3.4 Screensaver management

In this menu, you can set when the screen saver becomes active.

setting	screensaver
default	15 min.
minimum	1 min.
maximum	90 min.

The screensaver can be set to a custom defined screensaver.
You can always return to the default screensaver.

► *The screensaver image does not need for a transparent background.*

► *The screensaver can also be disabled (see screen 6.3.4a)*

6.3.4



Change the screensaver:
- press "*screensaver management*" to confirm
- press ‹ or › to scroll through the machine menu


6.3.4a



Activate/deactivate the screensaver option:
- press the checkbox to set the screensaver:
  - » select OFF and save:
    go to the next screen
  - » select ON and ☑:
    go to screen 6.3.4c

► *Save is only active if something has changed.*

6.3.4b

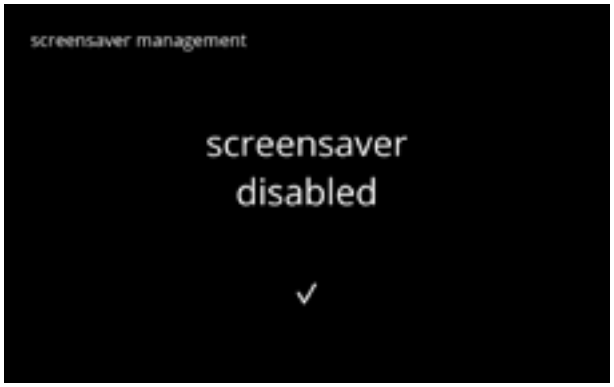

Information screen:
- screen 6.3.4 is displayed after a few seconds